

Smart USB charging cable (included)

Charging time: 3-4 hours
When the battery is fully charged, please unplug the USB charging cable in time.

1. The LED light is always on when charging;
2. The LED light flashes slowly when charging;
3. The LED light is off when fully charged.

The status of the USB indicator light when charging:

1. The LED light is always on when charging;
2. The LED light flashes slowly when charging;
3. The LED light is off when fully charged.

CHARGING METHOD

Connect the rechargeable battery pack port to the USB charging port as shown in the figure, and make sure that the port connection is tight and correct, and then plug the USB into the power adapter to charge.

BATTERY CHARGING INSTRUCTIONS

Power switch

7.2V BATTERY PACK

Connector of rechargeable battery pack

Battery connector of remote control car

1. Twist the battery cover latch to remove the battery cover.

2. Connect the rechargeable battery pack to the power port of the demolition machine closely and put it into the battery box.

3. Install the battery cover and twist the battery cover latch, then the battery installation is complete.

EXCAVATOR BATTERY INSTALLATION

Battery cover

Battery cover latch

FUNCTION INTRODUCTION OF REMOTE CONTROL

Automatic demonstration

Acousto-optic switch

Programming

Left turn in cab

Right turn in cab

Steering control rocker

Steering control rocker

Bucket up/down

Forearm up/down


Power switch

Big arm up

Big arm down

INSTALLATION INSTRUCTIONS OF REMOTE CONTROL BATTERY

1. Loosen the battery cover screw with a screwdriver and remove the battery cover.
2. Load two 1.5V "AA" batteries (batteries shall be purchased separately) into the battery box at the bottom of the remote control according to the correct polarity.
3. Close the battery cover and tighten the screws.

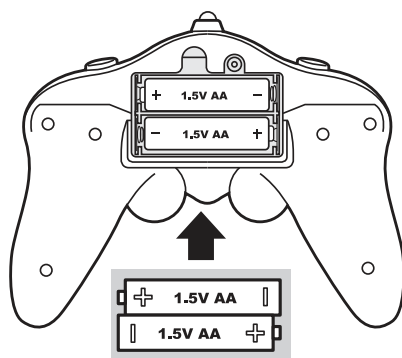

SAFETY INSTRUCTIONS OF BATTERY:

1. Remove and load the battery in the correct way;
2. Non-rechargeable batteries cannot be charged;
3. Rechargeable batteries must be charged under adult supervision;
4. Different types of batteries or old and new batteries cannot be mixed;
5. Only batteries that are the same as or equivalent to the recommended batteries can be used;
6. The rechargeable battery shall be removed from the model before charging;
7. The battery shall be loaded with the correct polarity;
8. The exhausted battery shall be removed from the model;
9. The power terminals must not be short-circuited;

Note: The battery shall be inserted with the correct polarity.

OPERATING INSTRUCTIONS OF EXCAVATOR

Big arm up

Big arm down

Forearm up/down (cycle)

Quaternary hammer up/down (cycle)

Programming

1. Press the programming key for 3 seconds to enter the programming mode, then perform various functions of the, and then press the programming key to complete the programming.

2. Press the programming key again to play the programming content.

3. Press any key to release.

Turn sound and light on or off

OPERATING INSTRUCTIONS OF EXCAVATOR

Forward movement

Backward movement

Turn front-left

Turn front-right

Turn left in the cab

Turn right in the cab

OPERATING INSTRUCTIONS OF EXCAVATOR

Forward movement

Backward movement

Turn front-left

Turn front-right

Turn left in the cab

Turn right in the cab

FOREARM INSTALLATION

1. First, the forearm is installed into the boom, and then the telescopic rod of the oil cylinder is put on the boom.

2. Install the screws to fix and lock.

3. Plug in the power cord.


FREQUENCY PAIRING AND POWER ON OF REMOTE CONTROL

(1) Power switch of vehicle body (2) Power switch of remote control

turn on the power of remote control and vehicle again to match again (same steps as above).


The product is remotely controlled with 2.4GHz frequency. For the first operation, the user must install the battery on the vehicle body and the remote control first, then make sure to power on, turn on the power of remote control, the user can turn off the power of remote control and vehicle, flashing, the vehicle will make a "tick" sound, that is, the frequency pairing is completed. If the vehicle does not respond to the remote control, the user can turn off the power of remote control and vehicle, turn on the power of remote control and vehicle again to match again (same steps as above).

AUTOMATIC DEMONSTRATION

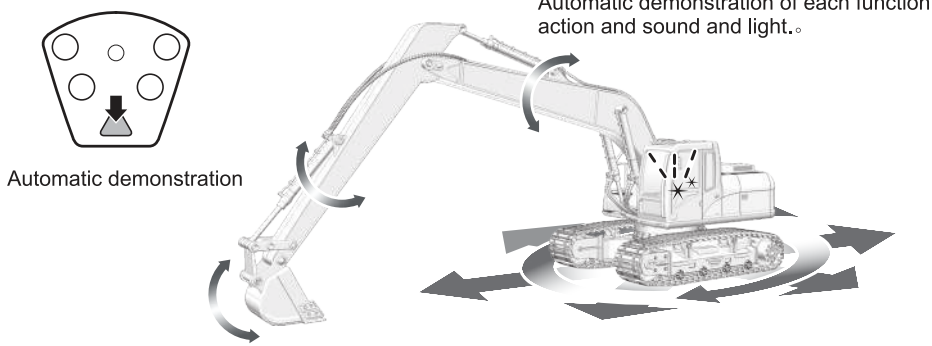


PARTS REPLACEMENT

1. Remove the fixing screws of bucket (Fig. 1) first, and then remove the bucket (Fig. 2).

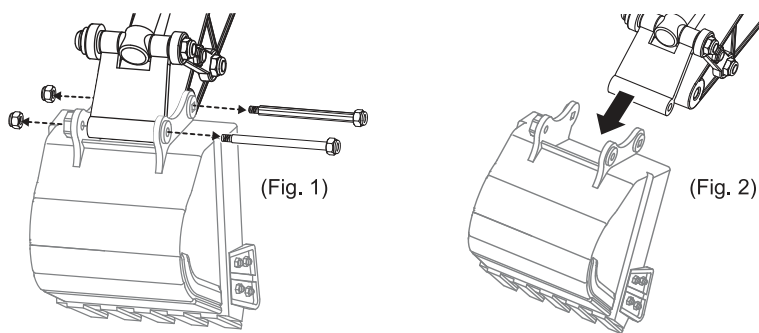

2. Install the parts on the middle arm, insert the screw spikes and tighten the nuts.

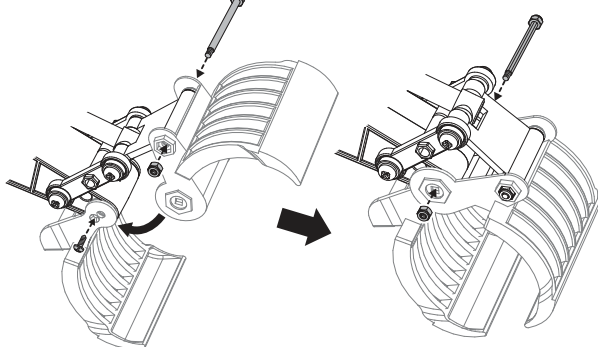

Log grapple (Purchase separately)

Declaration of Conformity

This product has been manufactured according to actual technical standards. The product is matching the requirements of the existing European and national guidelines. The Declaration of Conformity has been proved. AMEWI Trade e.K. declares that this product is matching the basic requirements and remaining regulations of the guideline 2014/53/EU (RED). The declarations and documents are stored at the manufacturer and can be requested and applied there.

The full text of the declaration of conformity can be found at: <https://amewi.com/Konformitaetserklaerungen>

For additional questions to the product and conformity please contact:
AMEWI Trade e.K. Nikolaus-Otto-Str. 18, 33178 Borcheln or via the website amewi.com

Security and Hazard Warnings



Warning! For damage, caused by disregarding of the manual, warranty expires!
We are not liable for secondary failures, material or personal damage, caused by improper usage or disregarding of the security notices.

Warning! Based on security and registration (CE) reasons, it is forbidden to modify the product personally. Do not disassemble the product.

Warning! Small parts. Danger of suffocation or risk of injury caused by small parts.



The product is not allowed to get moist or wet.
Even a drop down from a small height can cause damage to the product.

Battery Notice and Battery Disposal



Warning! Battery do not belong in children's hands. A change of the battery has to be done by an adult person. Never mix chargeable batteries with non-chargeable batteries. Never mix fully charged batteries with almost empty batteries. Never mix batteries of different capacities. Never try to charge dry batteries. Take care of the correct polarity. Defective batteries belong to special waste. Never leave a charging battery unattended. For questions about the charging time please read the manual or ask the manufacturer.

Disposal



Batteries containing hazardous substances are marked with the alongside symbols, which point to the prohibition of disposal in household garbage.

Additional notations for the critical heavy metal are: Cd=Cadmium, Hg=Quecksilver, Pb=lead (Label is placed on the batteries, for example below the bottom left trash symbols).



Based on RoHS labeling the manufacturer confirms, that all limit values were taken care of at the time of manufacturing.



Batteries labeled with the recycling symbol can be put into used battery collecting tank. (Most supermarkets have)
They are not allowed to be put into local household garbage.



AMEWI Trade e.K. is involved in the dual system for boxing over the company Firma Landbell AG. All used boxes are collected from partner companies (waste disposal contractor) at private customers (local household), sorted and properly utilized. The involvement in a Dual System helps to save CO₂ Emissions.

USER MANUAL



8+ AGES

1:14 RC EXCAVATOR G211E

Item No.: 22545



MAXIMUM TRANSMITTING POWER

Operation frequency: 2.405 ~ 2.475
Maximum Radio frequency power: maximum peak power: 5 dBm

AMEWI TRADE e.K.
Nikolaus-Otto-Str. 18, 33178 Borcheln
amewi.com; info@amewi.com