 







MASTERLIQUID ATMOS II 240

MASTERLIQUID ATMOS II 360

USER MANUAL

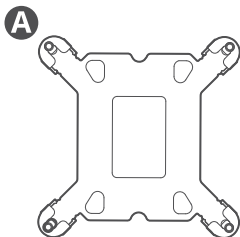

   x1

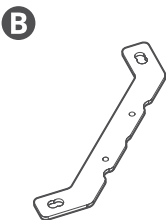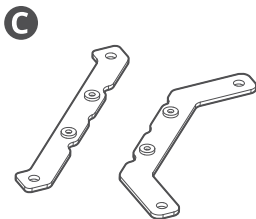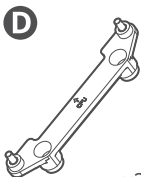PRE-INSTALLED
x2INTEL 1851 OFFSET BRACKET
x1

 
x2

240 ATMO II
x8
360 ATMO II
x121851/1700
x41200/115X
x4


x4



x4

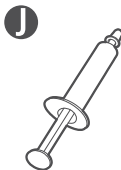


x1

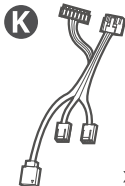 

x1




 x2




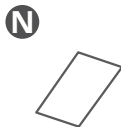


x1


 
02. INTEL & AMD

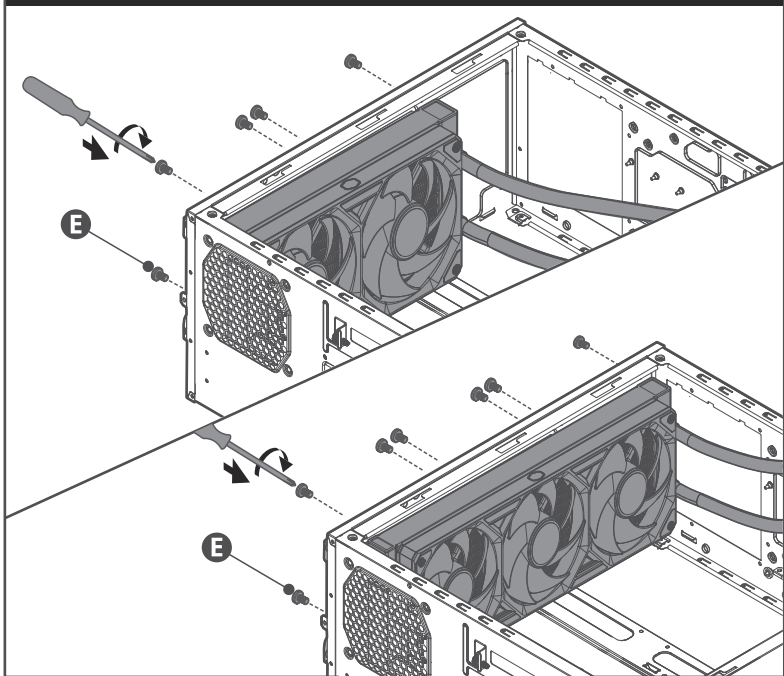

    
03. INTEL & AMD

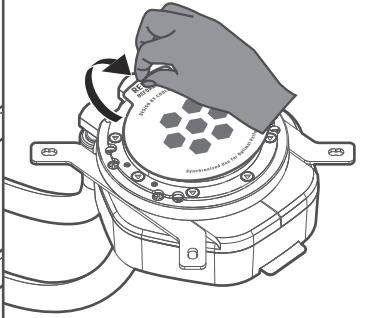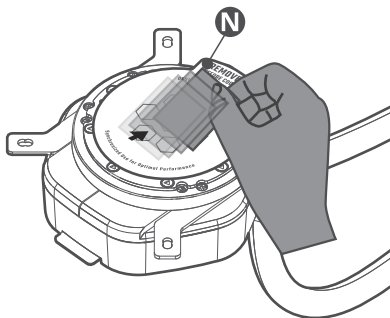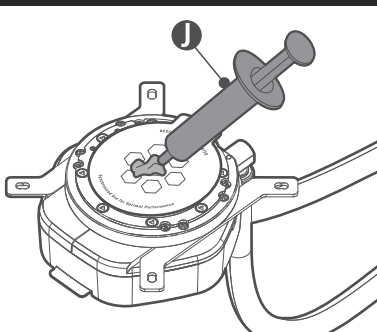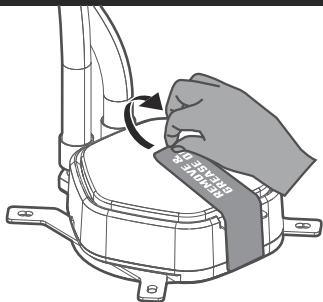

  
04. INTEL - LGA 1851 / 1700 / 1200 / 115X

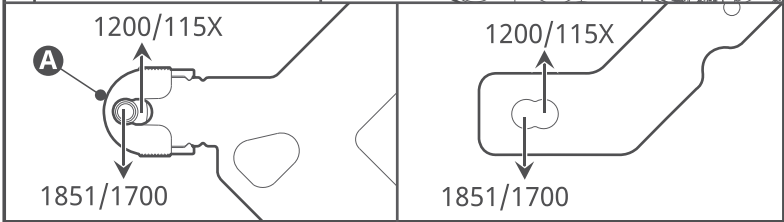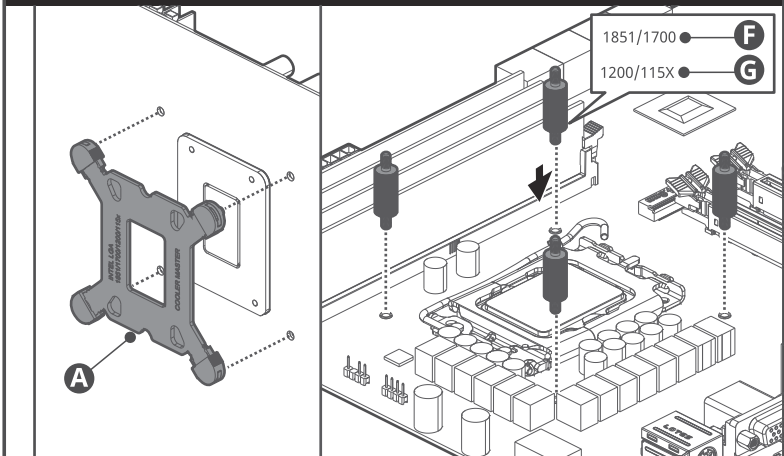

 05. INTEL - LGA 1851 / 1700 / 1200 / 115X

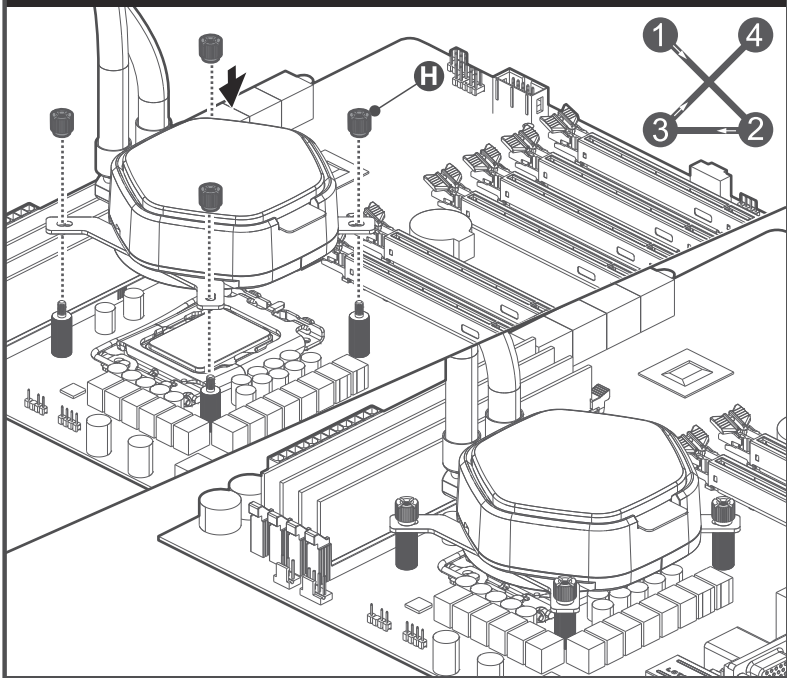


 06. INTEL 1851 OFFSET BRACKET




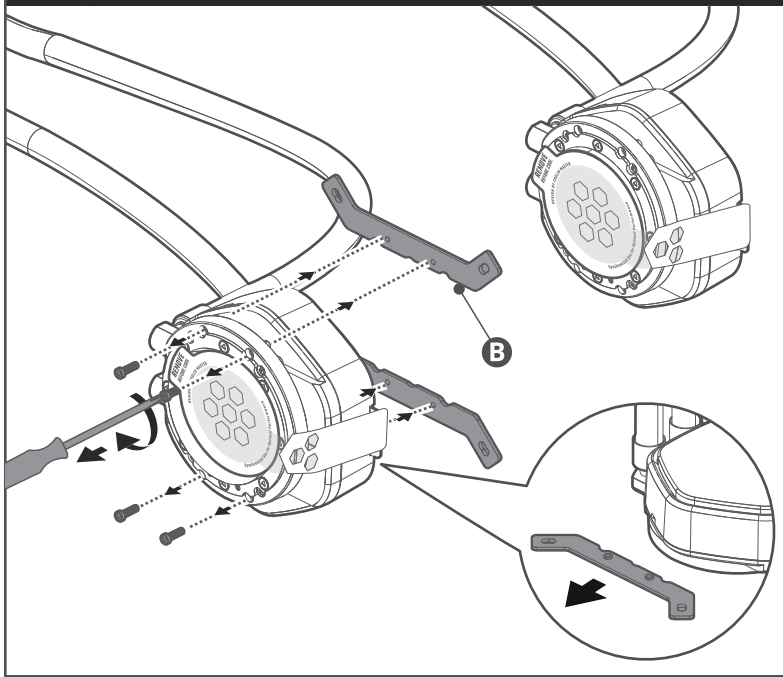


07. INTEL 1851 OFFSET BRACKET

 
NOTE: PLEASE CHECK WHETHER YOUR MOTHERBOARD IS COMPATIBLE WITH THIS OFFSET BRACKET.

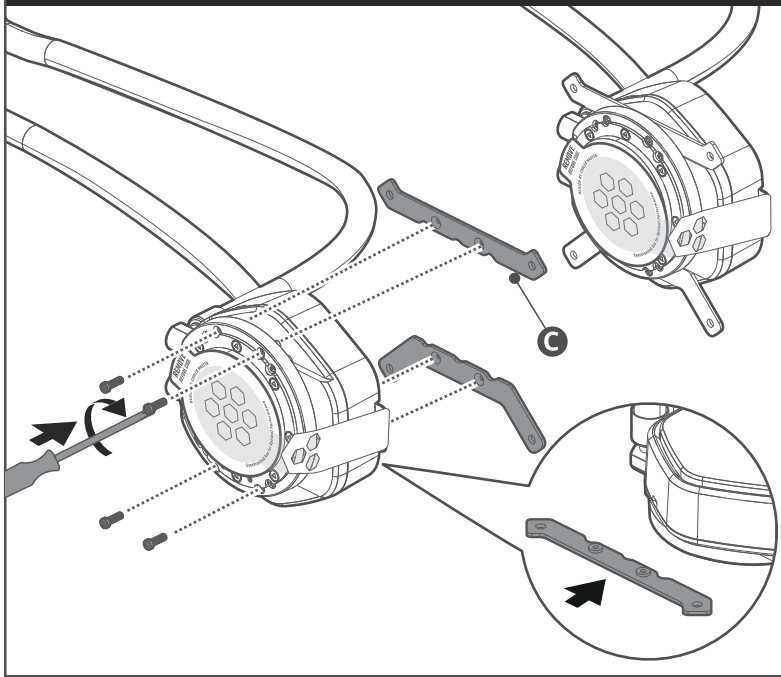

    08. INTEL 1851 OFFSET BRACKET

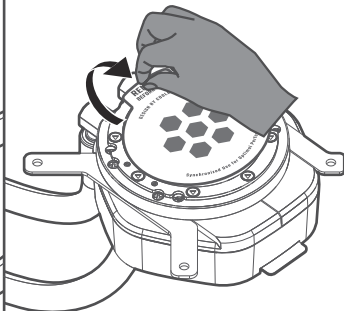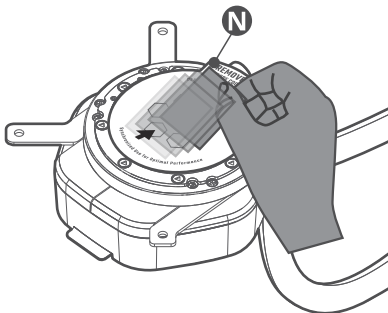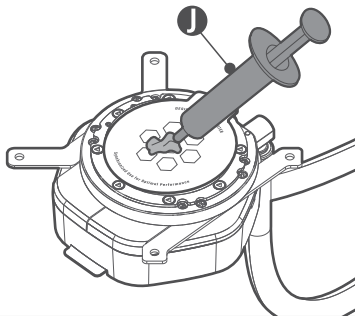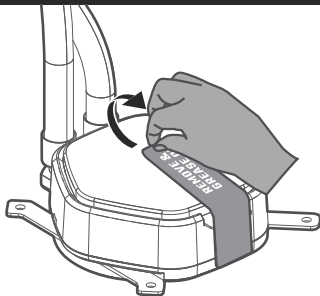


 09. INTEL 1851 OFFSET BRACKET

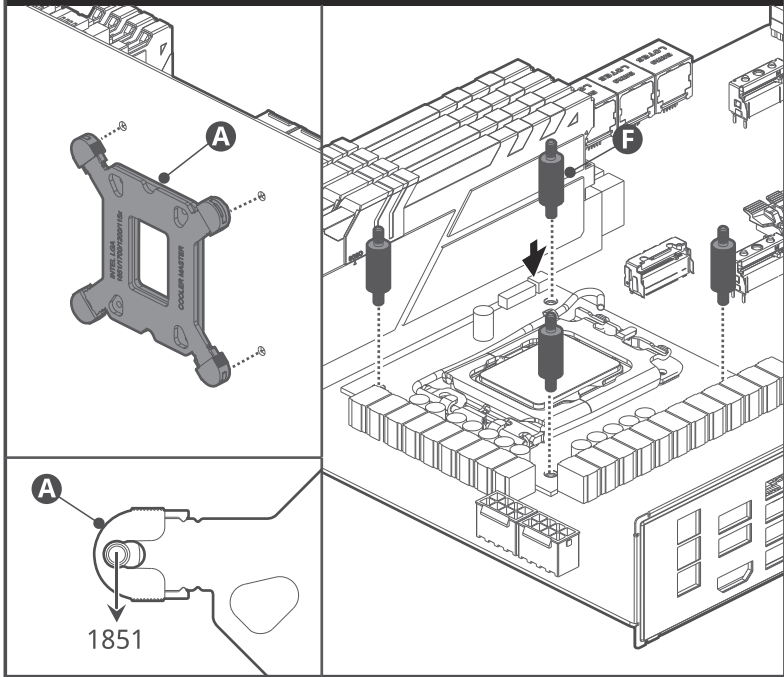


10. INTEL 1851 OFFSET BRACKET

 
NOTE: PLEASE CHECK WHETHER YOUR MOTHERBOARD IS COMPATIBLE WITH THIS OFFSET BRACKET.

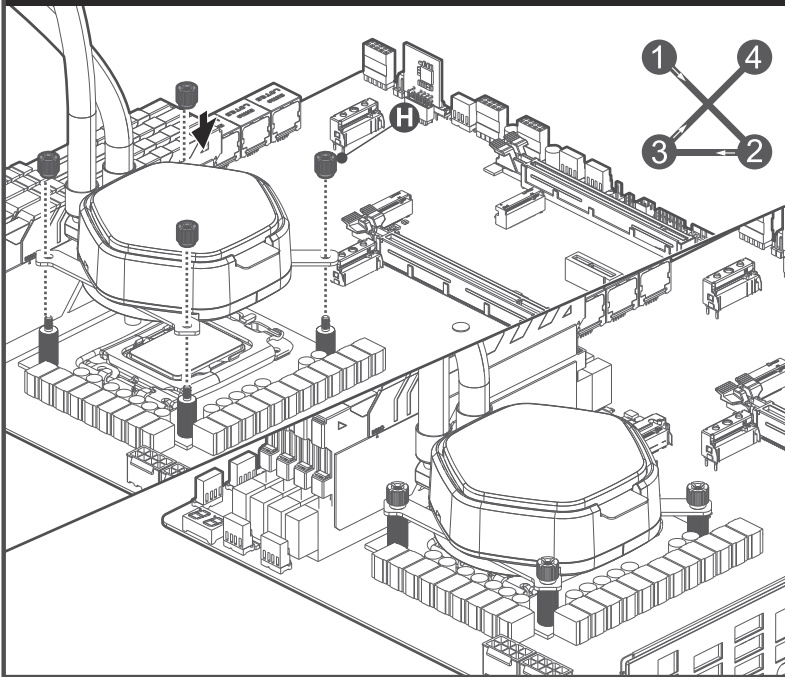

 
11. AMD SOCKET AM5 / AM4

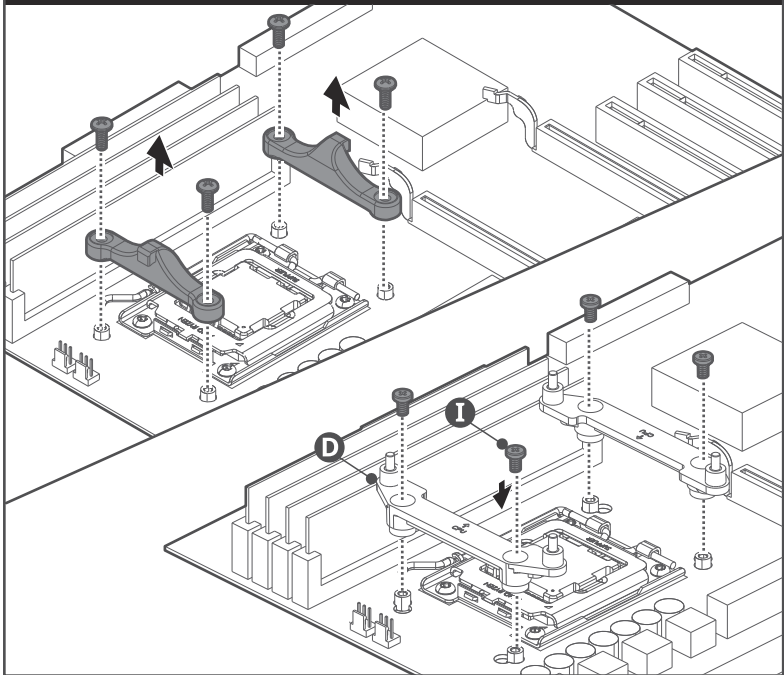

 
12. AMD SOCKET AM5 / AM4

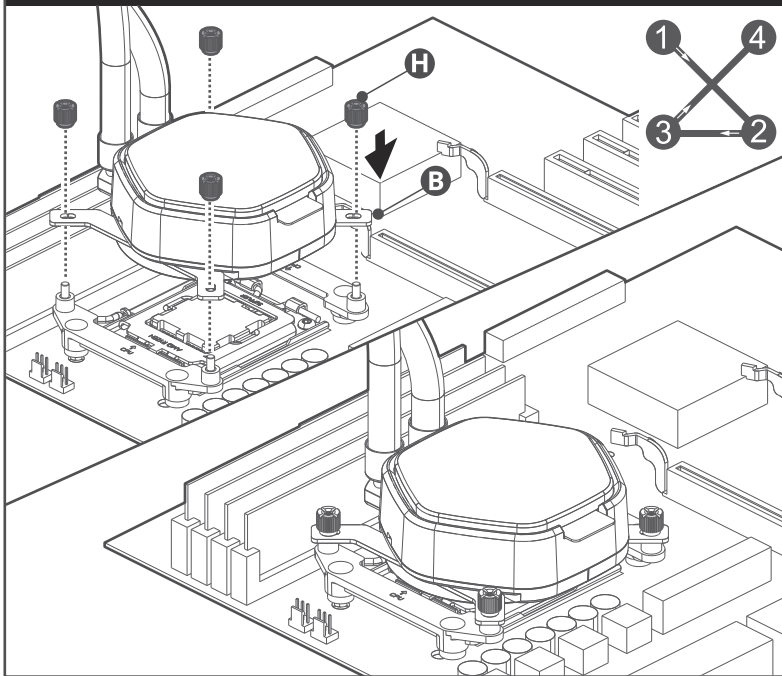

 13. 240 & 360 ARGB / PWM CONNECTION

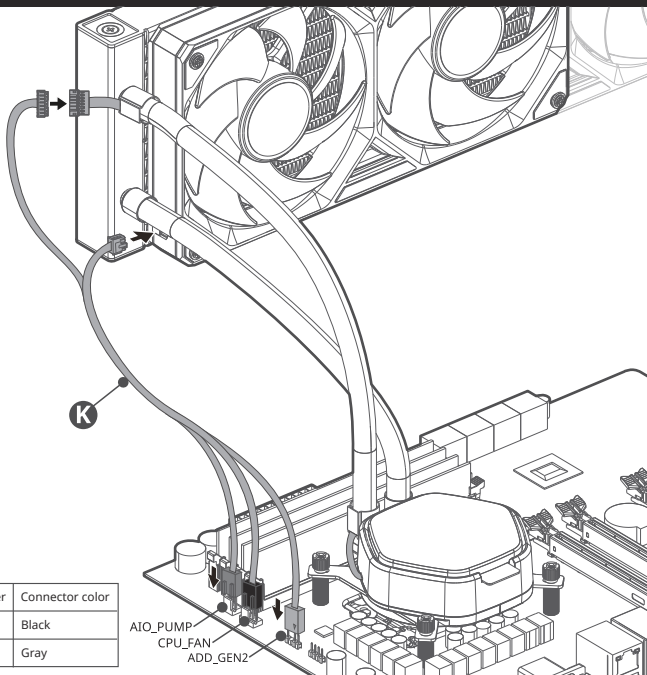

 
14. INTEL & AMD

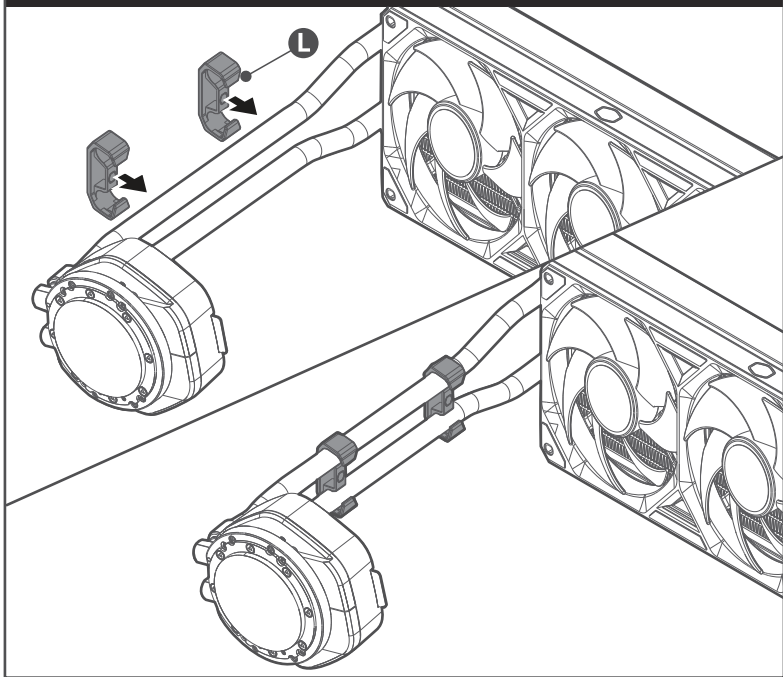

15. INTERCHANGEABLE PUMP COVER

NOTE: PUMP COVER MAY VARY BY EACH VERSION.

 
M

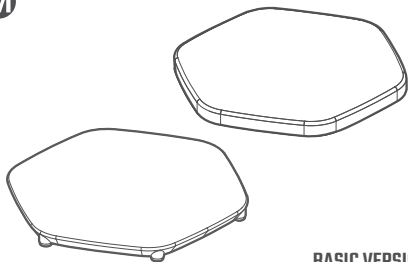

BASIC VERSION

x1

 
O

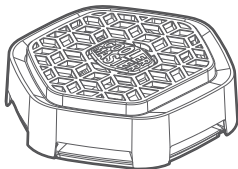

VRM FAN VERSION

x1

 
P

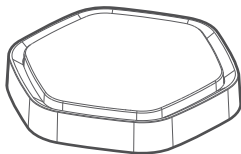

PIXEL LED VERSION

x1

 
Q

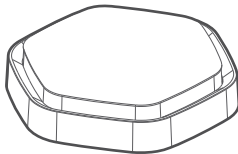

LCD VERSION

x1

 R

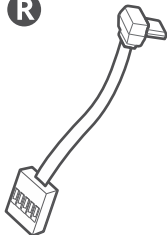


PIXEL LED VERSION


LCD VERSION

x1

 
16. BASIC VERSION: INFINITY MIRROR & METALLIC DESIGN

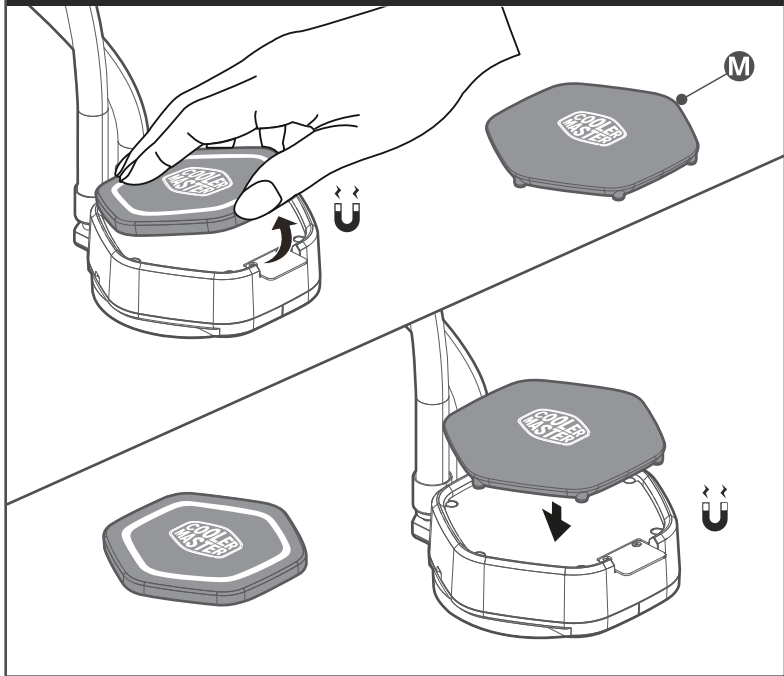

 
17. VRM FAN VERSION

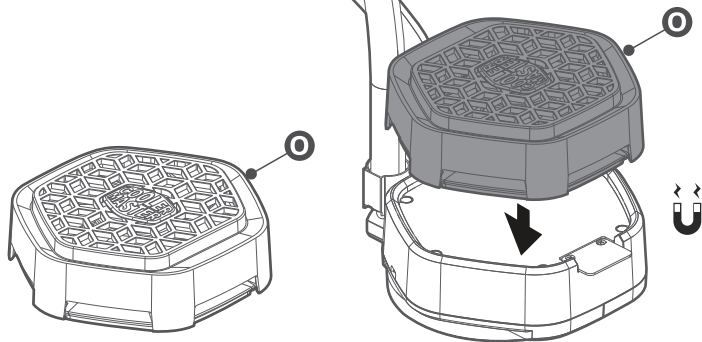

 
18. VRM FAN VERSION

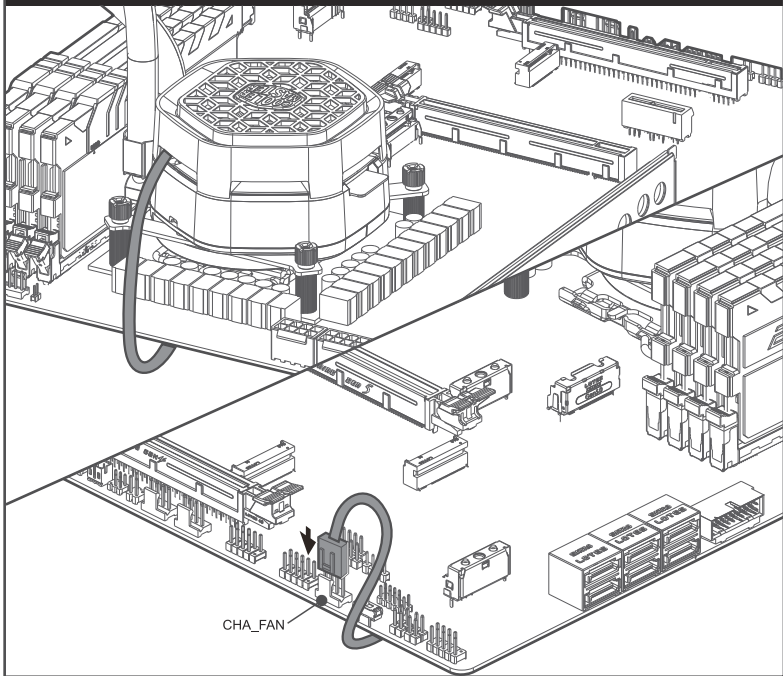

 
19. PIXEL LED VERSION

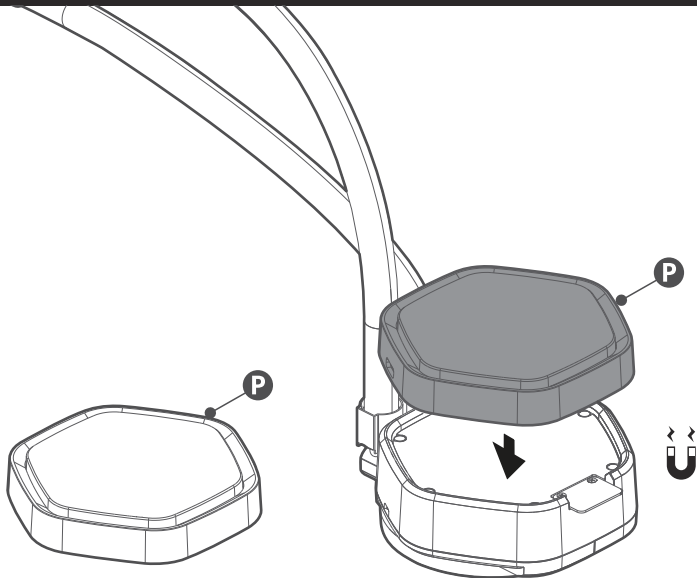

 
20. PIXEL LED VERSION

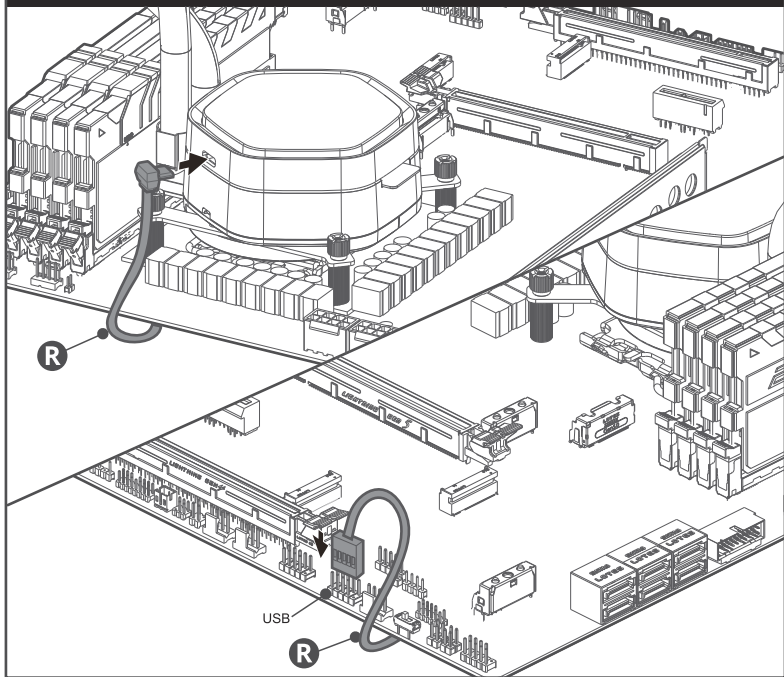

 21. LCD VERSION

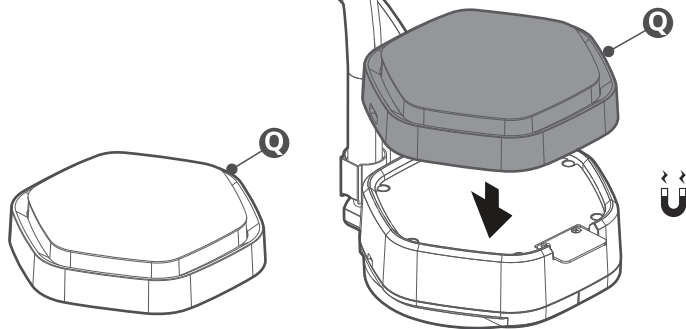

 22. LCD VERSION

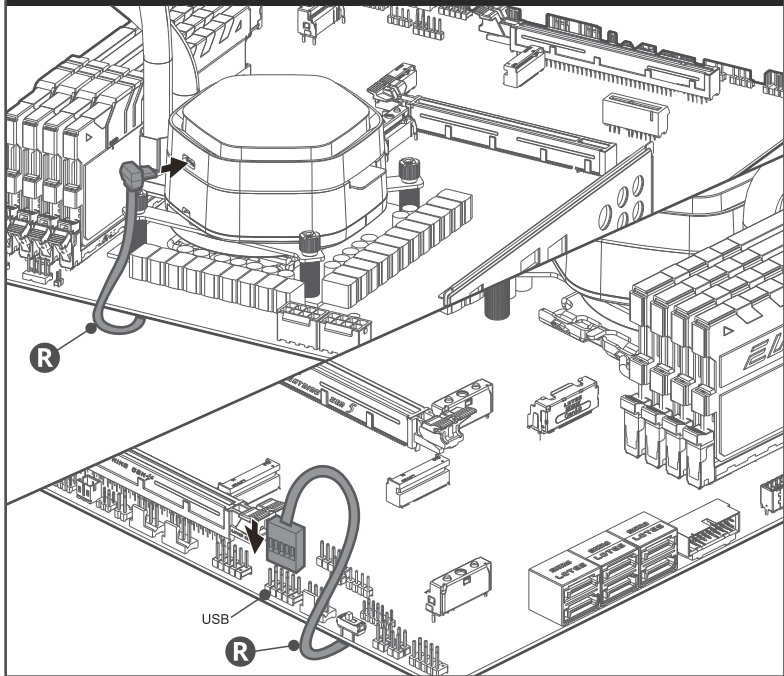

EN As a result of bubbles in the coolant, you might hear sounds coming from your cooler on the first run. Just chill out for 15 minutes and the sounds will disappear.

AR يوس لكيلا ام. يلوألا فضللا يف ذربملا نم اتاوصأ همست دق ،ديربتلل اقام يف اتاعاقف دوجو ببسب .
تاوصألا يف تختسو فقيقد 15 راطتلال.

BG Поради балончета в охладителя е възможно да чувате звуци при първото пускане. Просто изчакайте 15 минути и звуците ще изчезнат.

CS Při prvním spuštění se mohou z chladiče ozývat zvuky. Je to způsobeno bublinami v chladicí kapalině. Tyto zvuky po 15 minutách provozu ustanou.

CHT 由於冷卻液中存在氣泡，因此初次啟動時可能聽見散熱器發出聲音。這時只要靜待 15 分鐘，聲音即會消失。

CHS 冷却液中存有气泡，因此冷却器第一次运行时有可能发出声音。请静候15分钟，声音随后会消失。

DE Durch Bläschen im Kühlmittel macht Ihr Kühler bei der ersten Inbetriebnahme möglicher weise Geräusche. Warten Sie einfach 15 Minuten und die Geräusche verschwinden.

EL Λόγω της ύπαρξης φυσαλίδων στο ψυκτικό υγρό, ενδέχεται να ακούσετε ήχους κατά την πρώτη λειτουργία της ψύκτρας σας. Αυτοί οι ήχοι θα σταματήσουν μετά από 15 λεπτά.

ES Debido a las burbujas en el refrigerante, es posible que escuche sonidos procedentes de su refrigerador la primera vez que lo ponga en marcha. Simplemente, espere 15 minutos y los sonidos desaparecerán.

FR En raison de bulles dans le liquide de refroidissement, vous entendrez peut-être des sons provenant de votre refroidisseur à la première utilisation. Laissez simplement refroidir pendant 15 minutes pour que les sons disparaissent.

KR 냉각수에 거품이 있으면 최초 작동 시 콜러에서 소리가 날 수 있습니다. 이 경우 15분 동안 냉각시키면 소리가 사라집니다.

- KZ** Салқындату сұйықтығының ішінде көпіршіктердің болуына байланысты, салқындатқышты алғаш рет қосқан кезде дыбыстар естілуі мүмкін. 15 минут бойы күтіңіз, дыбыстар басылады.
- HU** A hűtőfolyadékban lévő buborékok miatt hangokat hallhat a hűtőből az első indításkor. Hagyja hűlni 15 percig és a hang megszűnik.
- ID** Dikarenakan gelembung udara di pendingin, anda mungkin akan mendengarkan suara pada pendingin yang dinyalakan pertama kali. Tunggu selama 15 menit, suara tersebut akan hilang.
- IT** Se sono presen el liquido refrigerante, al primo uso è possibile che la ventola emetta un rumore. Attendere 15 minuti e il rumore scomparirà.
- JP** 初回運転時、冷却液に含まれる泡が原因でクーラーから音が聞こえることがあります。15分ほどそのままにしておくと言は消えます。
- NL** Door luchtbellen in de koelvloeistof, hoort u bij het eerste gebruik geluiden van de koelventilator. Als u 15 minuten geduld hebt, zullen de geluiden verdwijnen.
- PL** Przy pierwszym uruchomieniu pęcherzyki powietrza w środku chłodzącym mogą powodować słyszenie dźwięków dochodzących z elementu chłodzącego. Po 15 minut dźwięki zanikną.
- PT** Na primeira utilização, poderão ser emitidos ruídos provocados pela existência de bolhas de ar no refrigerante. Aguarde um pouco, os ruídos desaparecerão após 15 minutos.
- RU** Вследствие наличия пузырьков воздуха в охлаждающей жидкости при первом использовании кулер может издавать шум. Дайте кулеру поработать 15 минут, чтобы этот шум прекратился.
- SR** Usled prisustva mehurića u rashladnoj tečnosti, moguće je da ćete pri prvom pokretanju čuti zvukove koji dopiru iz hladnjaka. Samo isključite 15 minuta i zvukovi će nestati.
- TR** Soğutucudaki kabarcıkların bir sonucu olarak, ilk çalıştırmada soğutucunuzdan çıkan sesler duyabilirsiniz. Yalnızca 15 dakika sonra sesler kesilecektir.
- UA** У результаті утворення бульбашок у хладагенті під час першого запуску можуть виникати певні звуки. Просто зачекайте 15 хвилин, і звуки зникнуть.

Please visit our website at www.coolermaster.com

China - Cooler Master China
Room 112, Building 9, No. 327, Songjin Road, Jinshanwei Town,
Jinshan Dist., Shanghai City, China
Tel: 400-9986-400

Europe - Cooler Master Europe B.V.
Lodewijkstraat 1b, 5652AC Eindhoven, The Netherlands
Tel: +31- (0)40-702-0900

North America - Cooler Master NA
1 N Indian Hill Blvd Suite D200 Claremont, CA 91711 U.S.A.
Tel: +1-888-624-5099

For the most updated information, please visit our official website:
www.coolermaster.com /
Cooler Master Support: <https://account.coolermaster.com/>



Cooler Master Europe B.V.
Lodewijkstraat 1b, 5652AC Eindhoven,
the Netherlands
consumer_care@coolermaster.eu



Ver 1.0 2025/06

©2025 Cooler Master Technology Inc. All Rights Reserved. All trademarks are registered to their respective owners.