


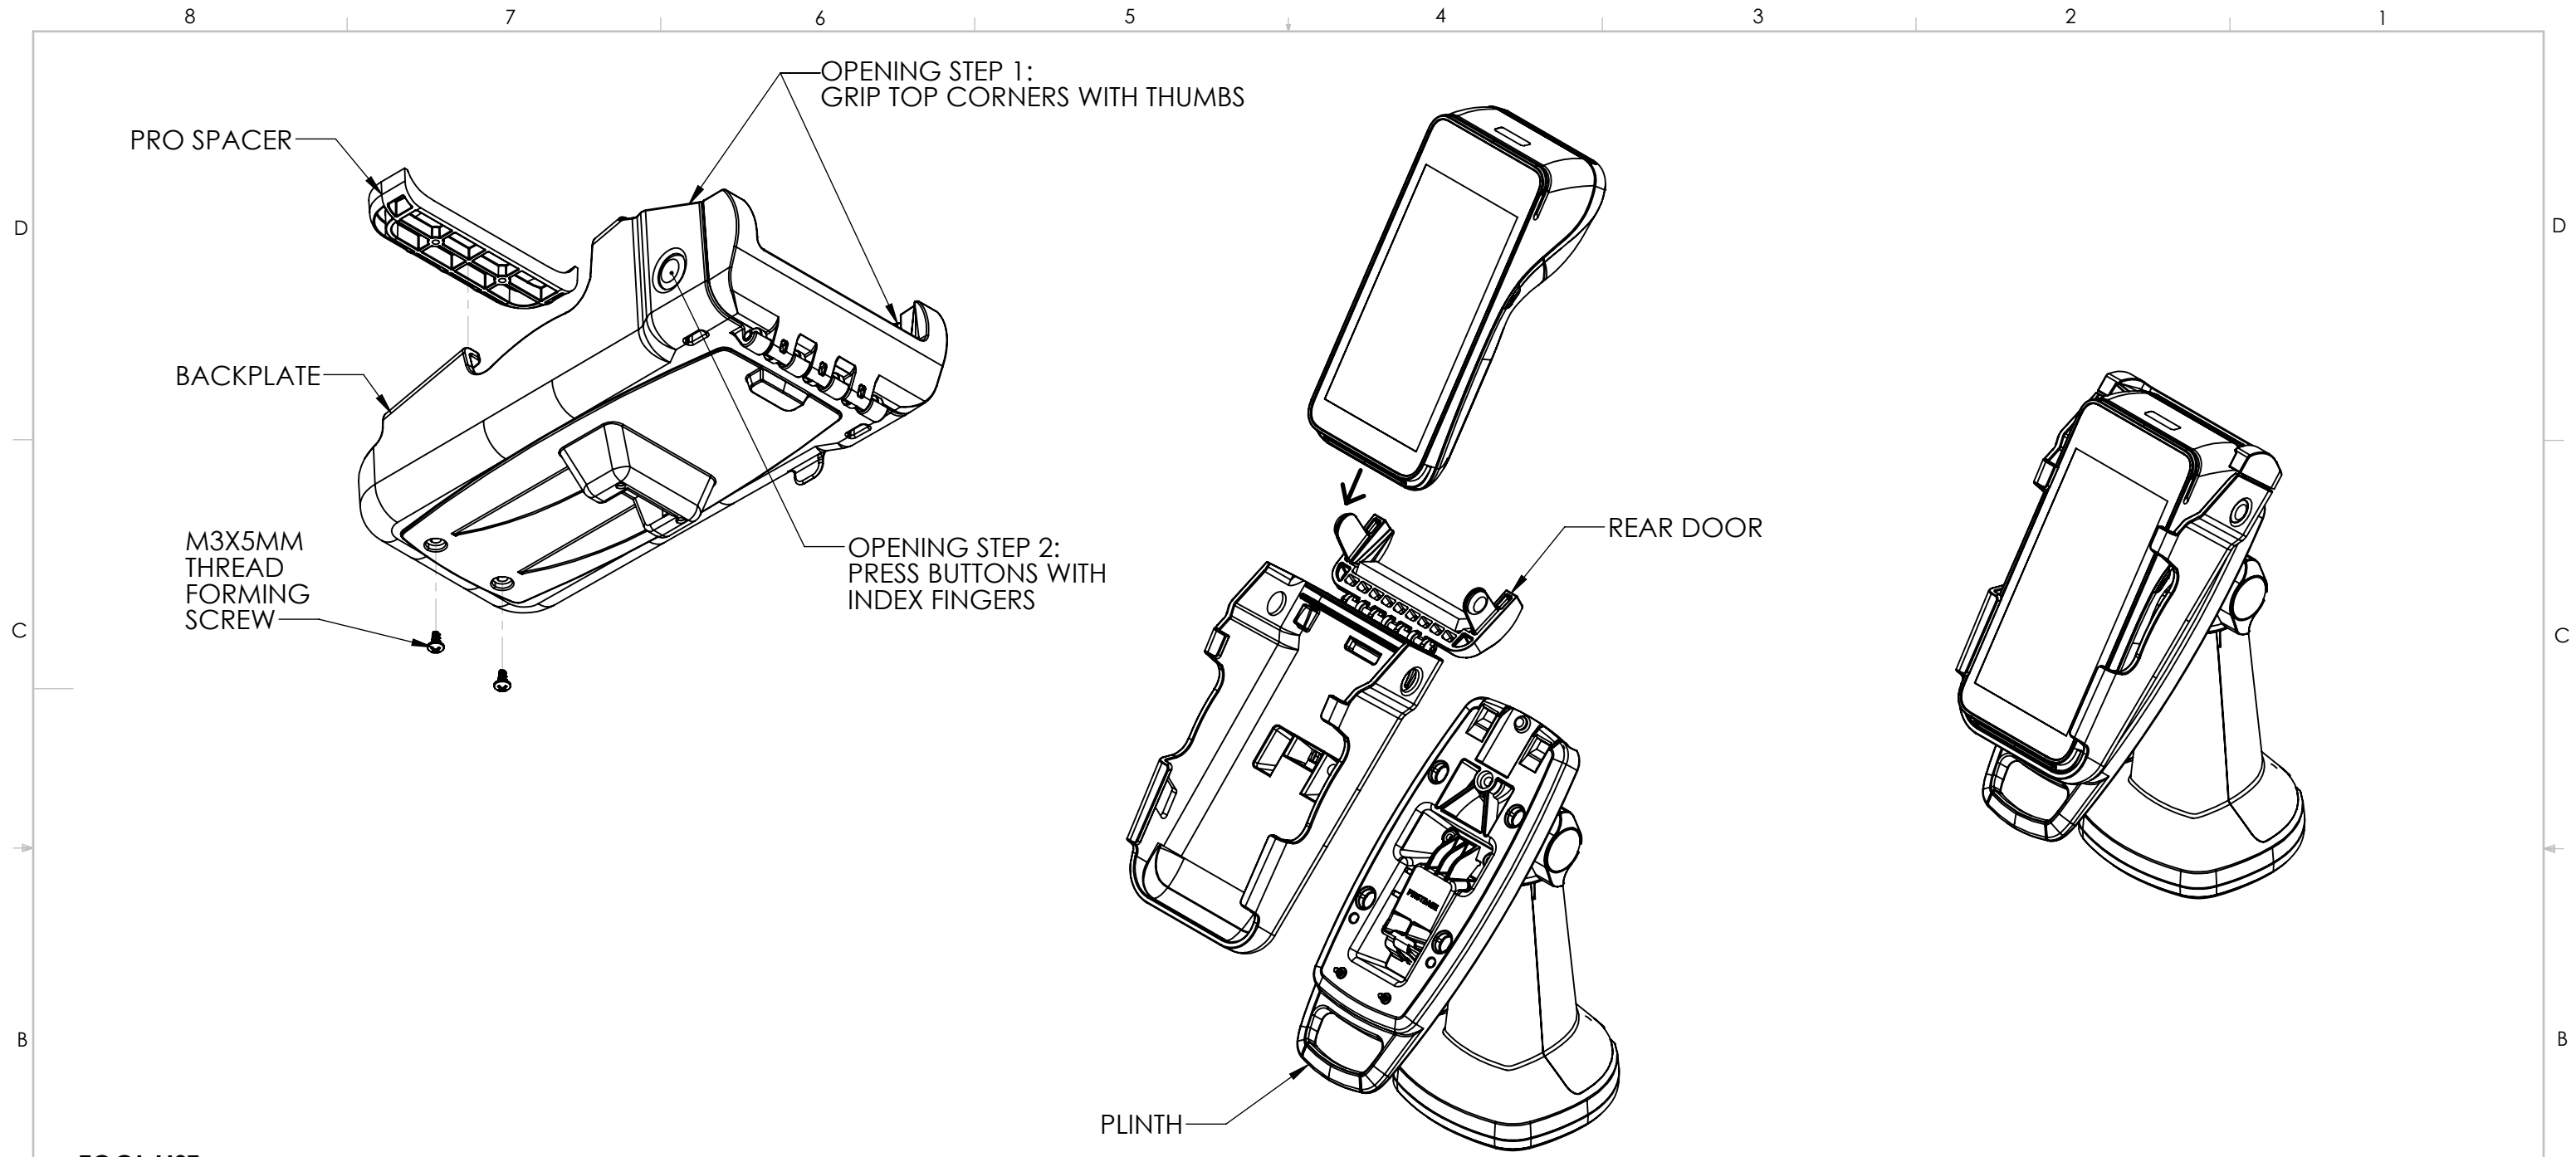

TOOL LIST:
1: #2 PHILIPS SCREW OR DRILL DRIVER

- ASSEMBLY STEPS:**
1. IF USING THE A920 PRO INSTALL THE **PRO SPACER** BY PLACING IT INTO THE BACKPLATE AND SECURING USING **2X M3X5MM THREAD FORMING SCREWS** FROM THE BACK.
 2. IF USING THE A920 THEN THE **PRO SPACER** DOES NOT NEED TO BE USED
 3. OPEN **BACK PLATE** BY HOLDING AT THE TOP CORNERS AND PRESSING IN THE BUTTONS ON THE SIDE WITH YOUR INDEX FINGERS WHILE PULLING APART THE SIDES TO OPEN THE **REAR DOOR**.
 4. SLIDE THE DEVICE INTO THE **BACKPLATE** AND SECURE BY CLOSING THE **REAR DOOR**.
 5. THE DEVICE AND **BACKPLATE** CAN NOW BE SNAPPED ONTO THE **PLINTH**
 6. TO REMOVE THE A920 DEVICE TO REPLACE PRINTER PAPER, REPEAT STEP #3 TO OPEN THE REAR DOOR AND SLIDE DEVICE OUT

DWG. NO.		REV.	TITLE	HAVIS	SHEET 1 OF 1
DRAWN RSW		F			
DATE 07/26/22			PAX A920 & A920 PRO COMPOSITE BACKPLATE FOR FLEXIPOLE STANDS		

THE INFORMATION CONTAINED IN THIS DRAWING IS THE SOLE PROPERTY OF HAVIS, INC. AND REPRODUCTION IN PART OR IN WHOLE WITHOUT THE WRITTEN PERMISSION OF HAVIS, INC. IS PROHIBITED.

CUSTOMER INSTRUCTIONS