20

USER MANUAL

THERMALRIGHT®
low Temperature high Performance

AQUA ELITE

High Performance PWM Fan
High Liquid Flow Rate Pump
High Density Aluminum Fins

REV:1.0

www.thermalright.com

01

用户手册

THERMALRIGHT®
low Temperature high Performance

AQUA ELITE

水冷专用的高性能PWM风扇
配备高扬程 高性能水泵
新型大面积冷排

REV:1.0

www.thermalright.com

02

附件清单

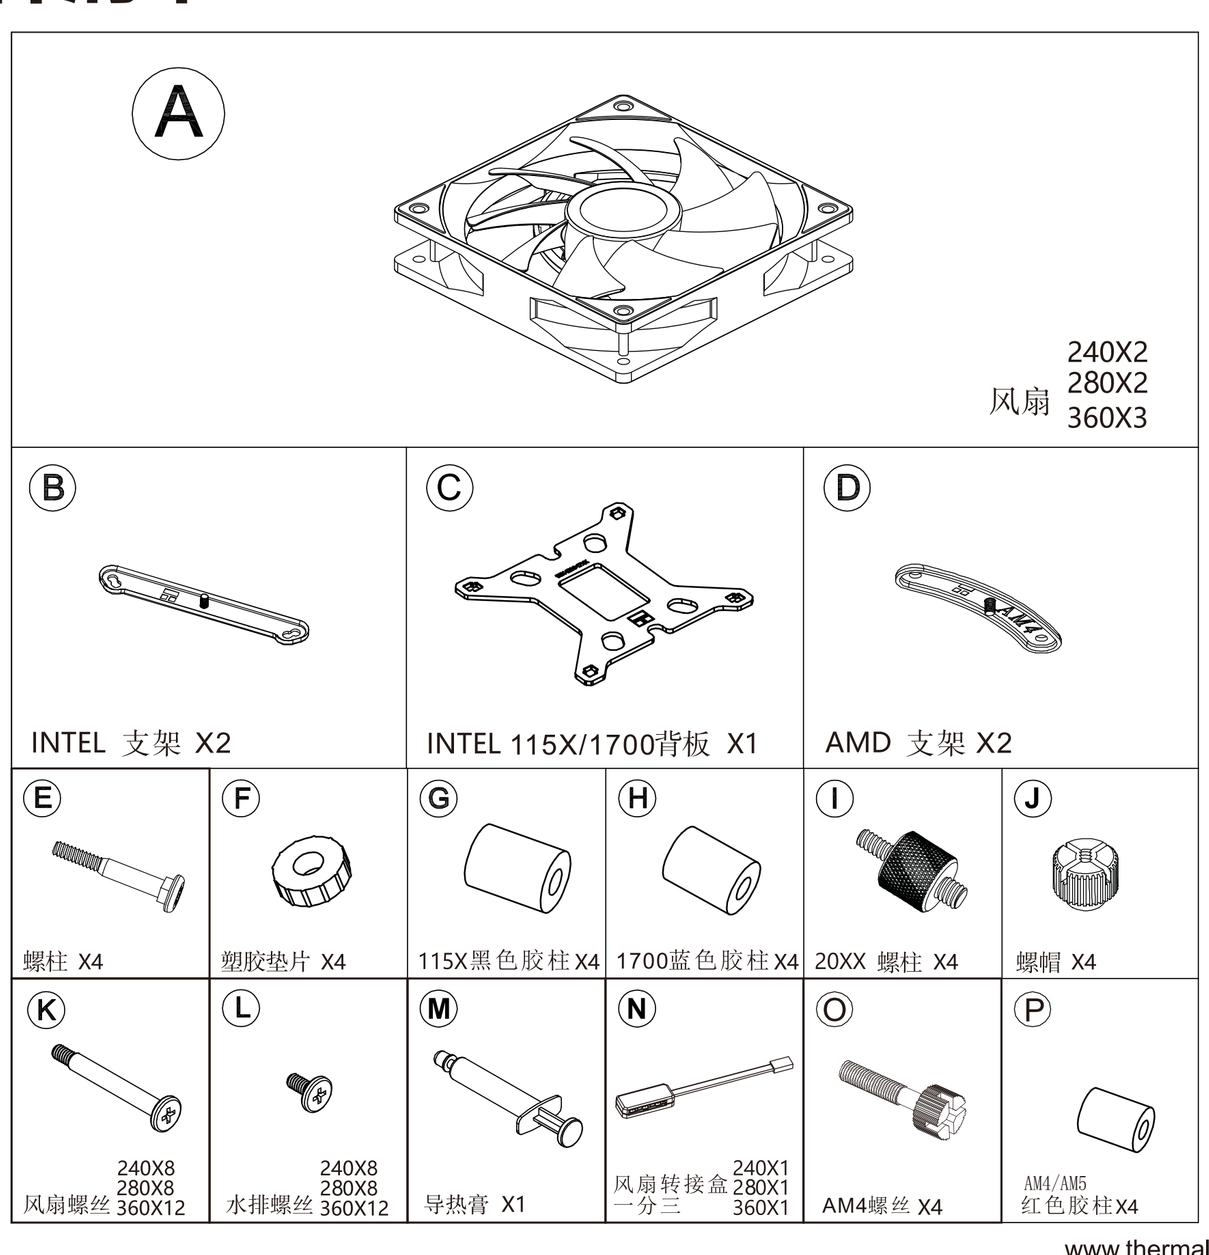

www.thermalright.com

19

Components

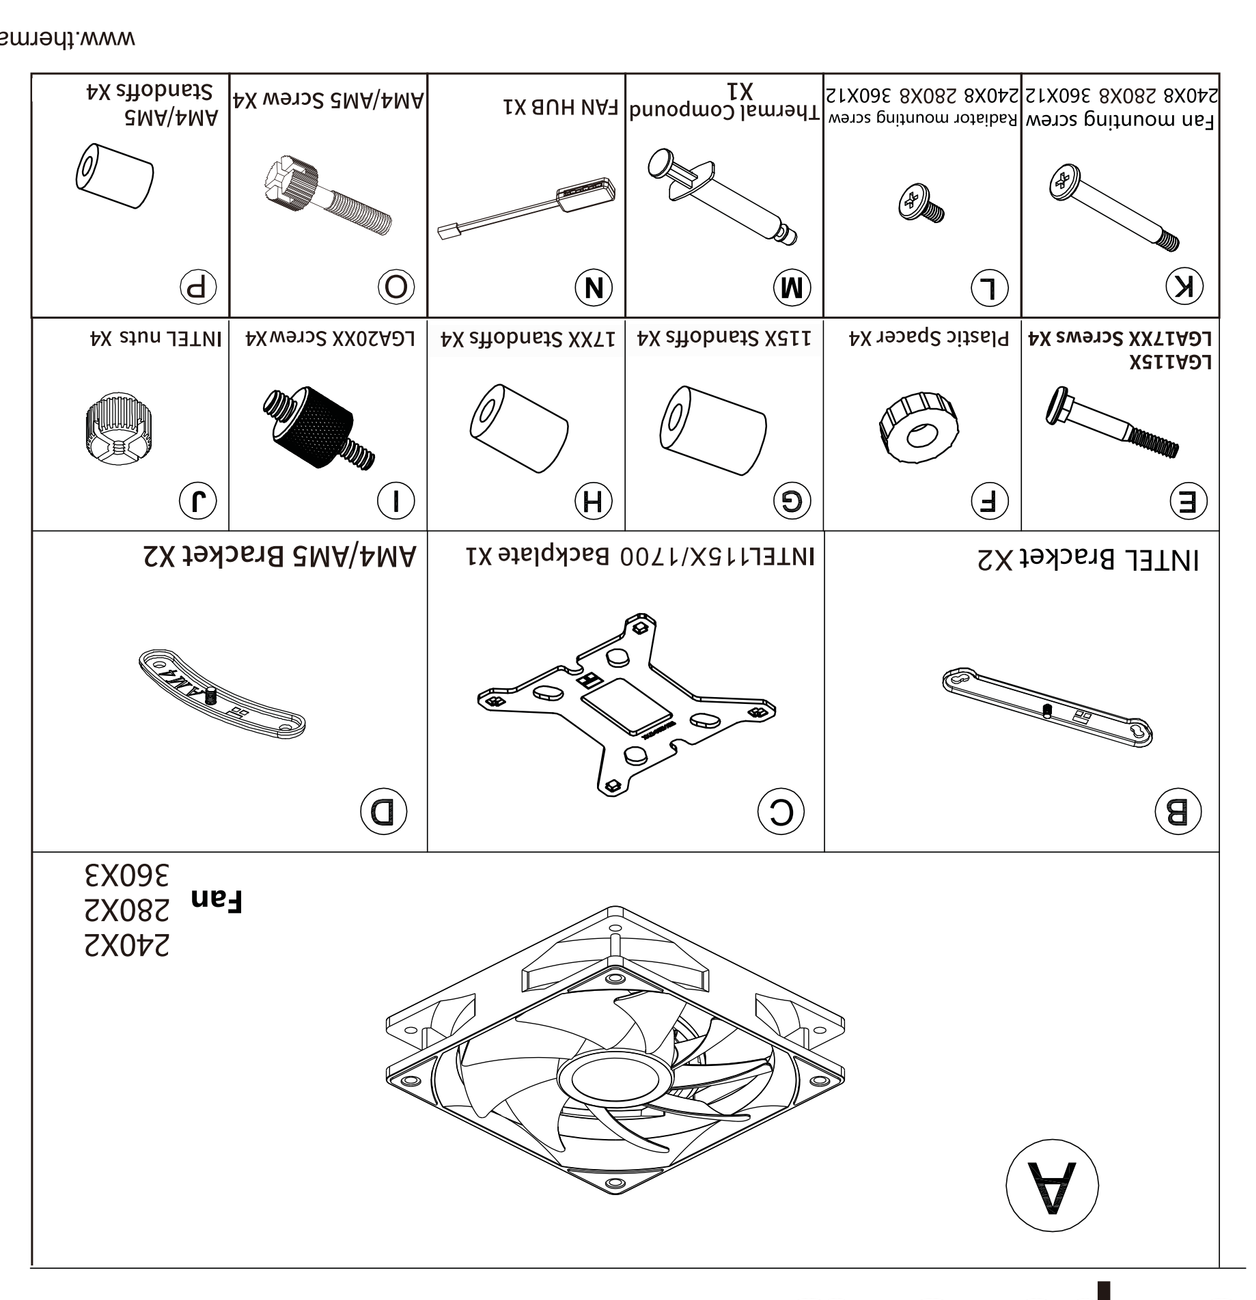

www.thermalright.com

18

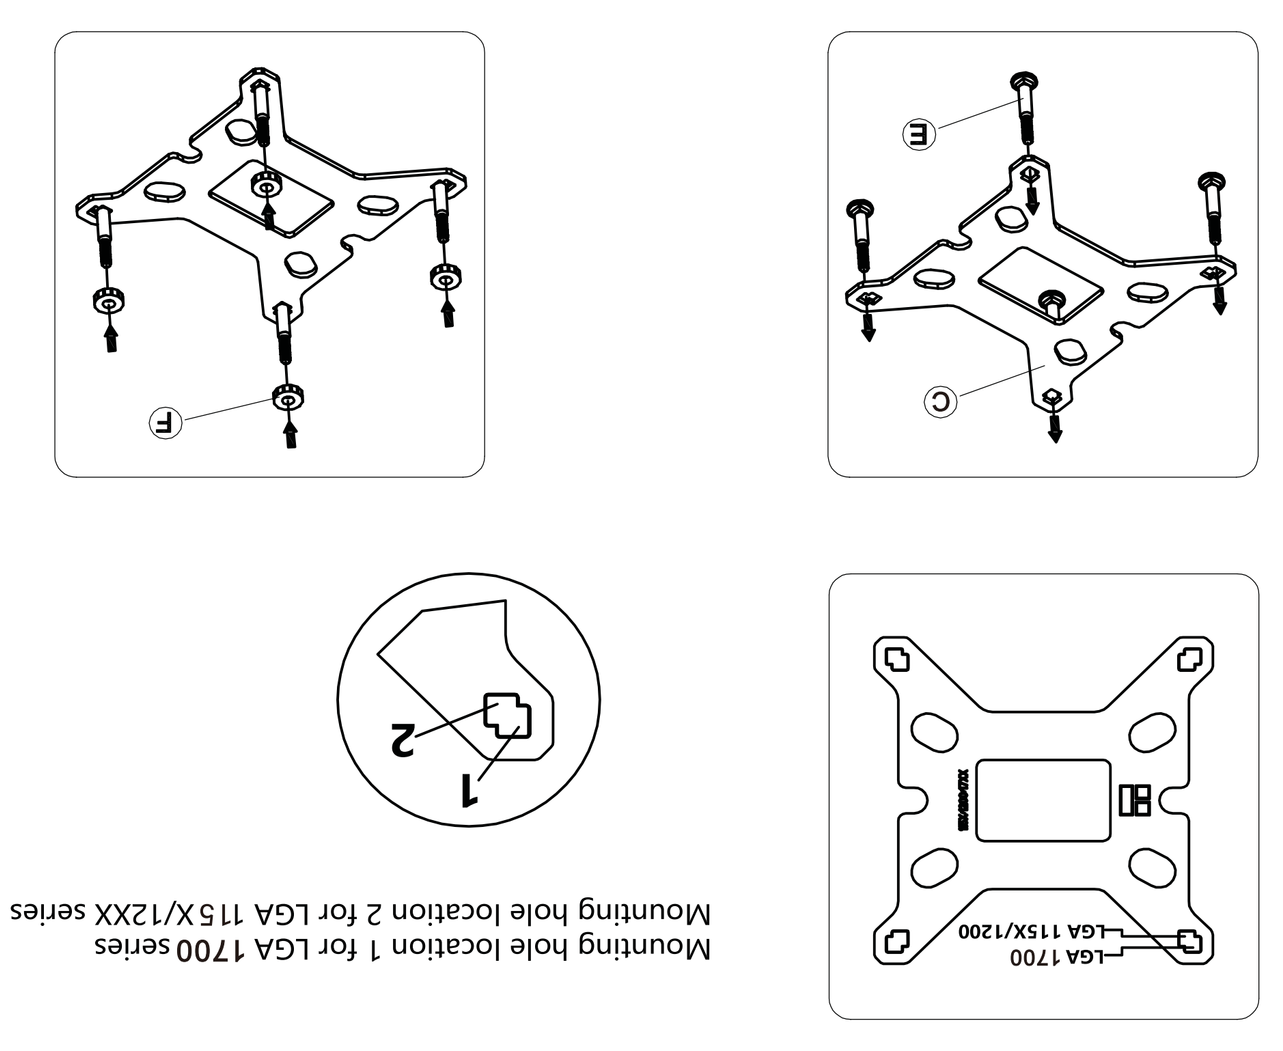

Step 1: Insert screws into holes depending on motherboard socket

Step 2: Install spacers on screws

Mounting hole location 1 for LGA 1700 series
Mounting hole location 2 for LGA 115X/12XX series

www.thermalright.com

03

INTEL LGA115X/1700安装背板

安装孔位置1用于LGA1700系列
安装孔位置2用于LGA 115X/12XX系列

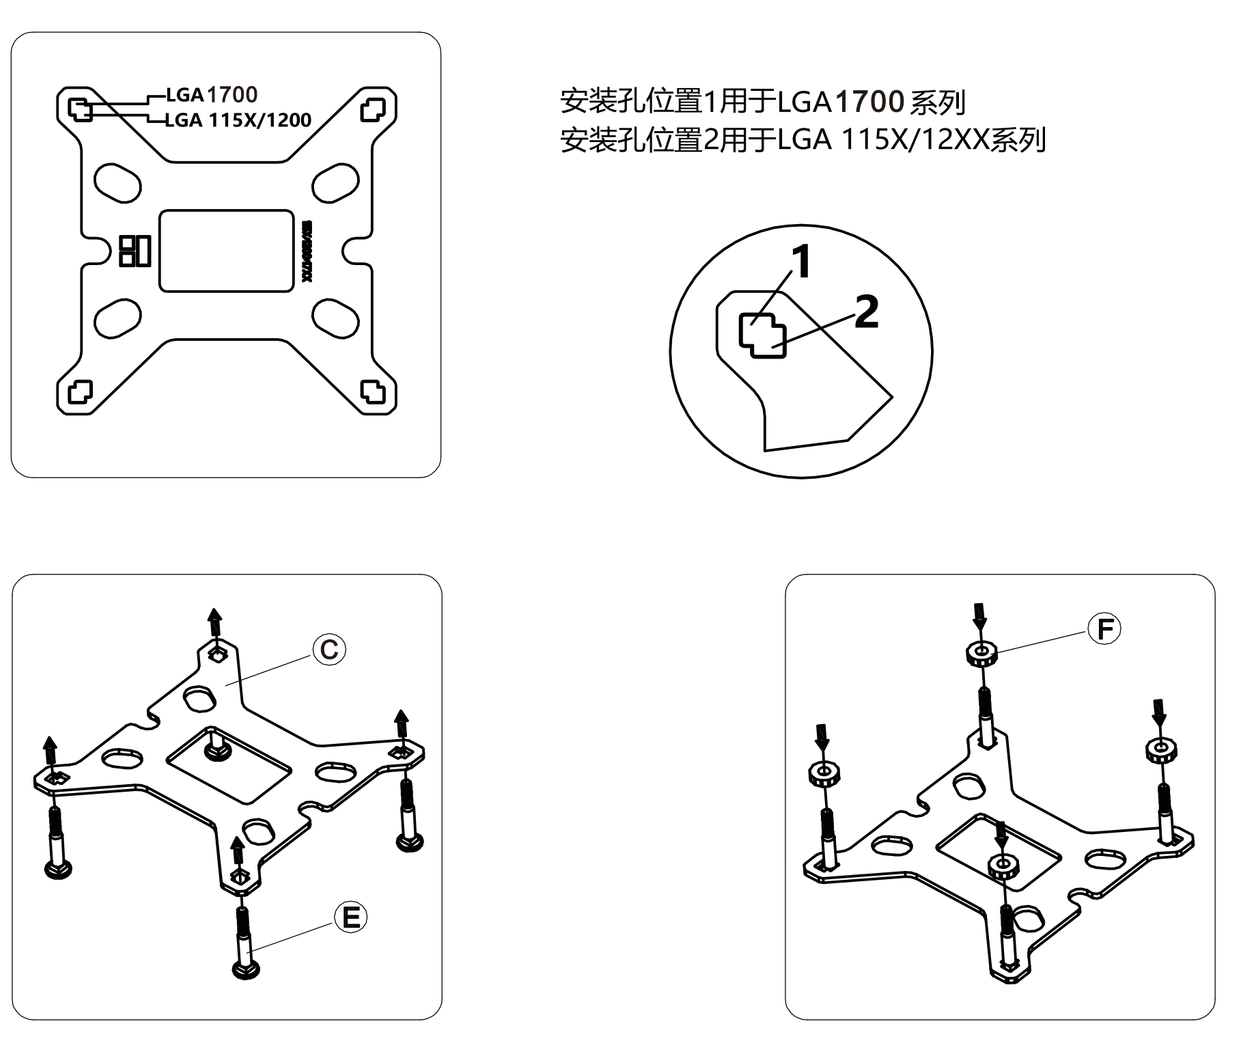

第一步：将螺柱插入对应主板所需的位置；

第二步：将塑胶垫片套在4个螺柱上。

www.thermalright.com

04

INTEL LGA115X/1200安装

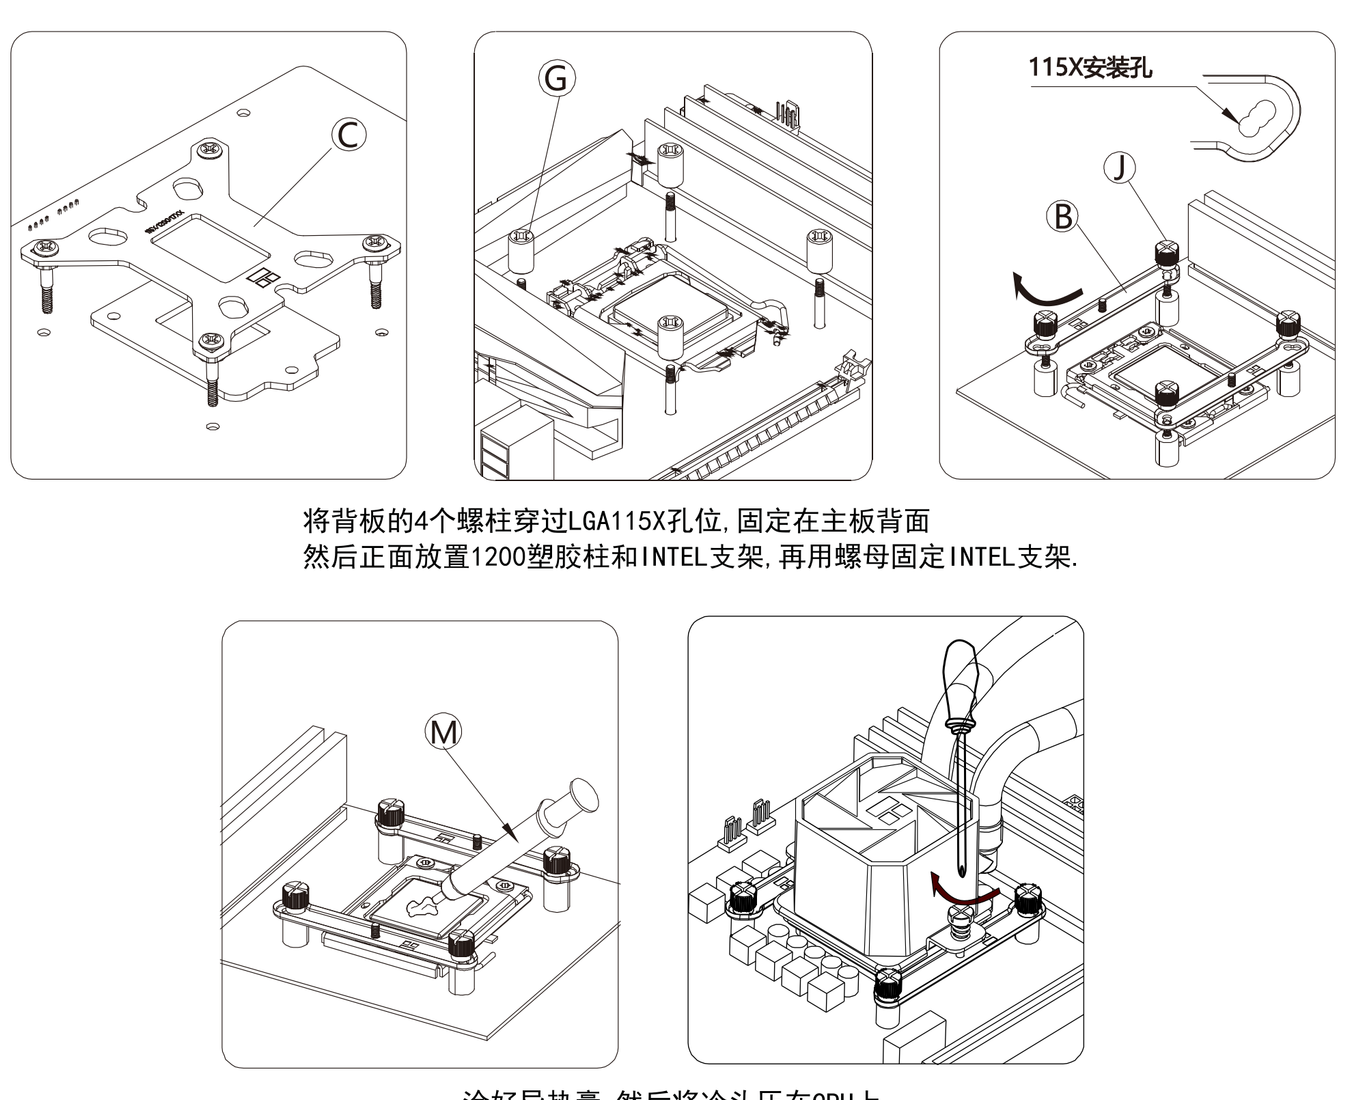

将背板的4个螺柱穿过LGA115X孔位，固定在主板背面
然后正面放置1200塑胶柱和INTEL支架，再用螺母固定INTEL支架.

涂好导热膏，然后将冷头压在CPU上，
将压杆扣具螺杆用螺丝刀锁紧.

www.thermalright.com

17

INTEL LGA115X/1200 Installation

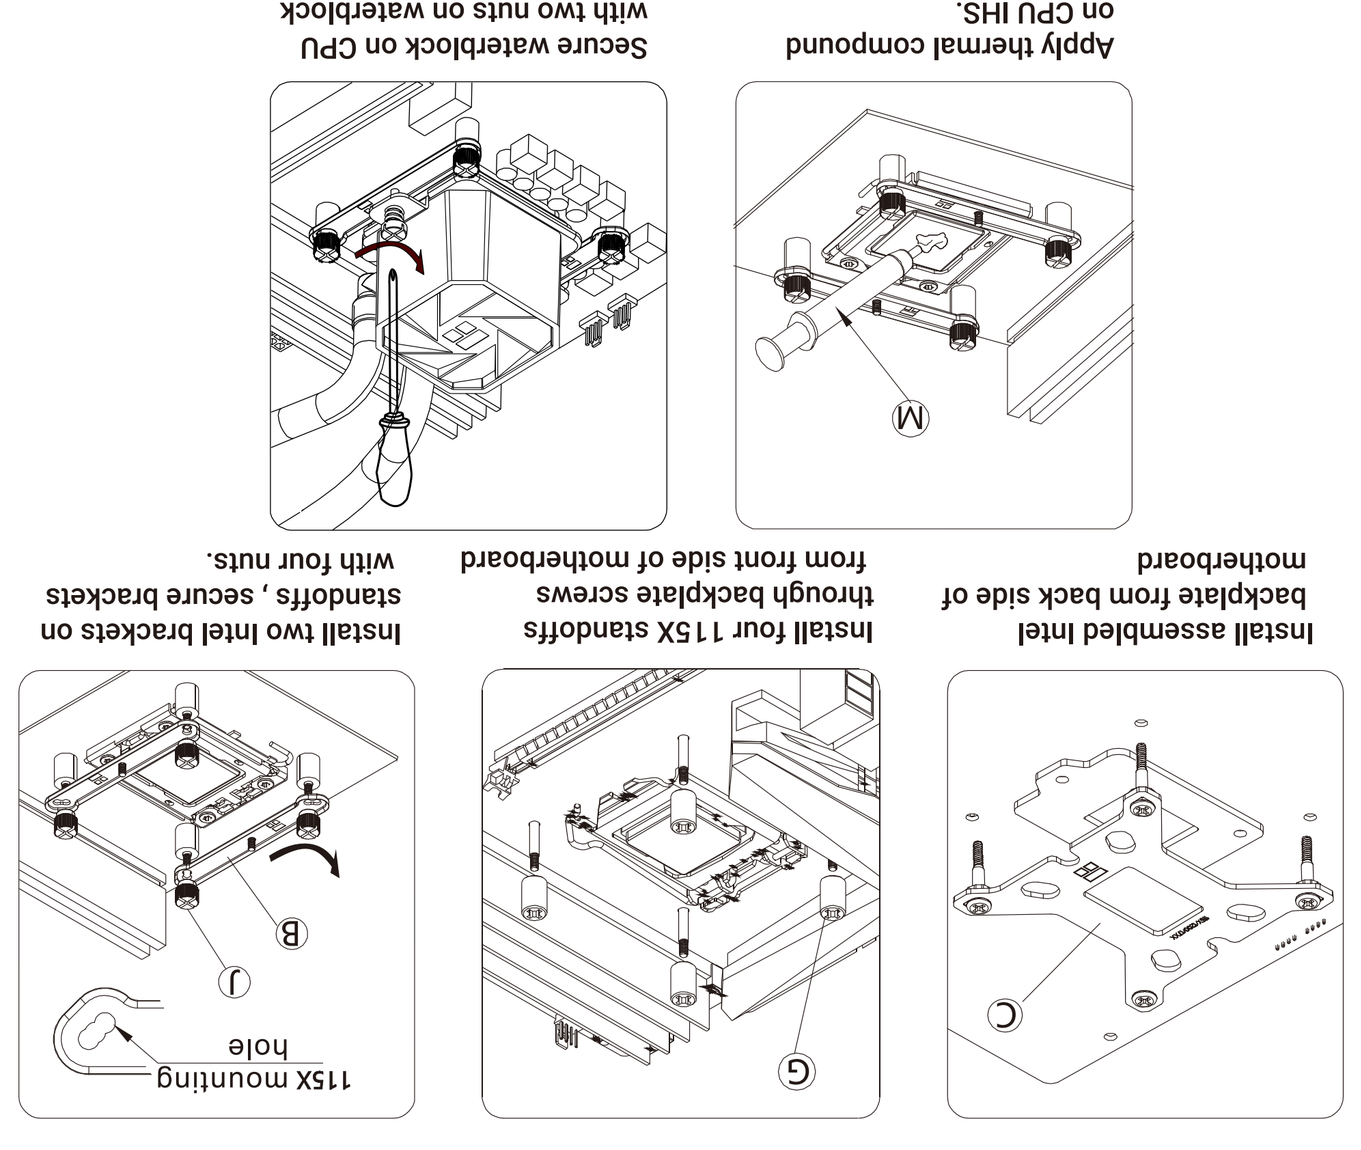

Install assembled Intel backplate from back side of motherboard

Install four 115X standoffs through backplate screws from front side of motherboard

Install two Intel brackets on standoffs , secure brackets with four nuts.

Apply thermal compound on CPU IHS.

Secure waterblock on CPU with two nuts on waterblock bracket

www.thermalright.com

16

INTEL LGA1700 Installation

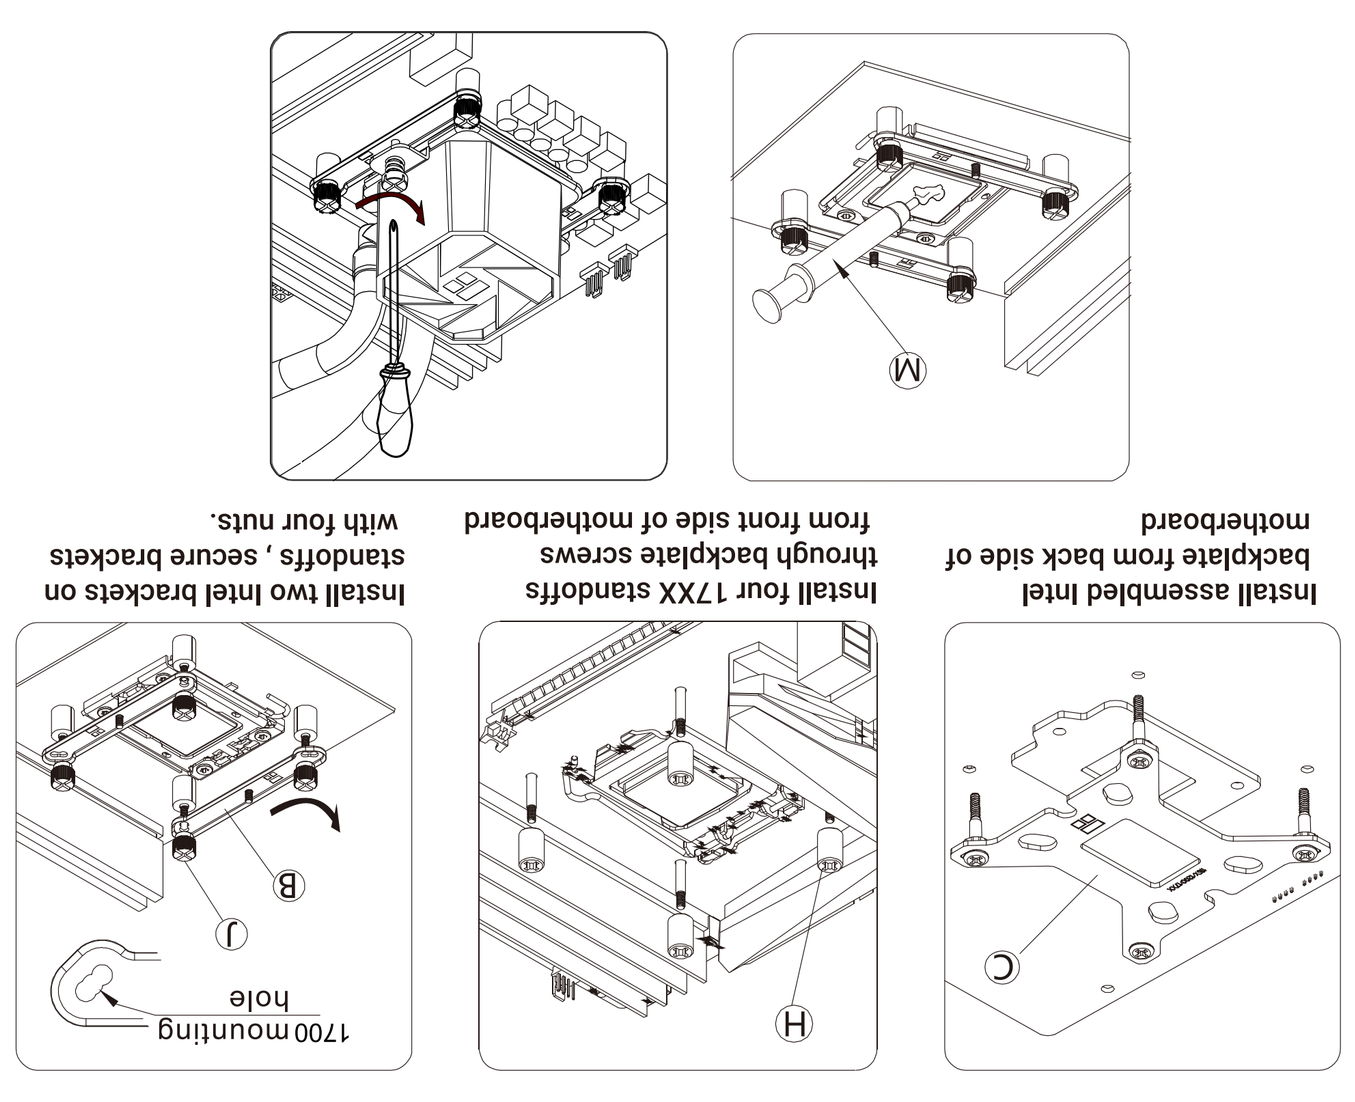

Install assembled Intel backplate from back side of motherboard

Install four 17XX standoffs through backplate screws from front side of motherboard

Install two Intel brackets on standoffs , secure brackets with four nuts.

Apply thermal compound on CPU IHS.

Secure waterblock on CPU with two nuts on waterblock bracket

www.thermalright.com

05

INTEL LGA1700 安装

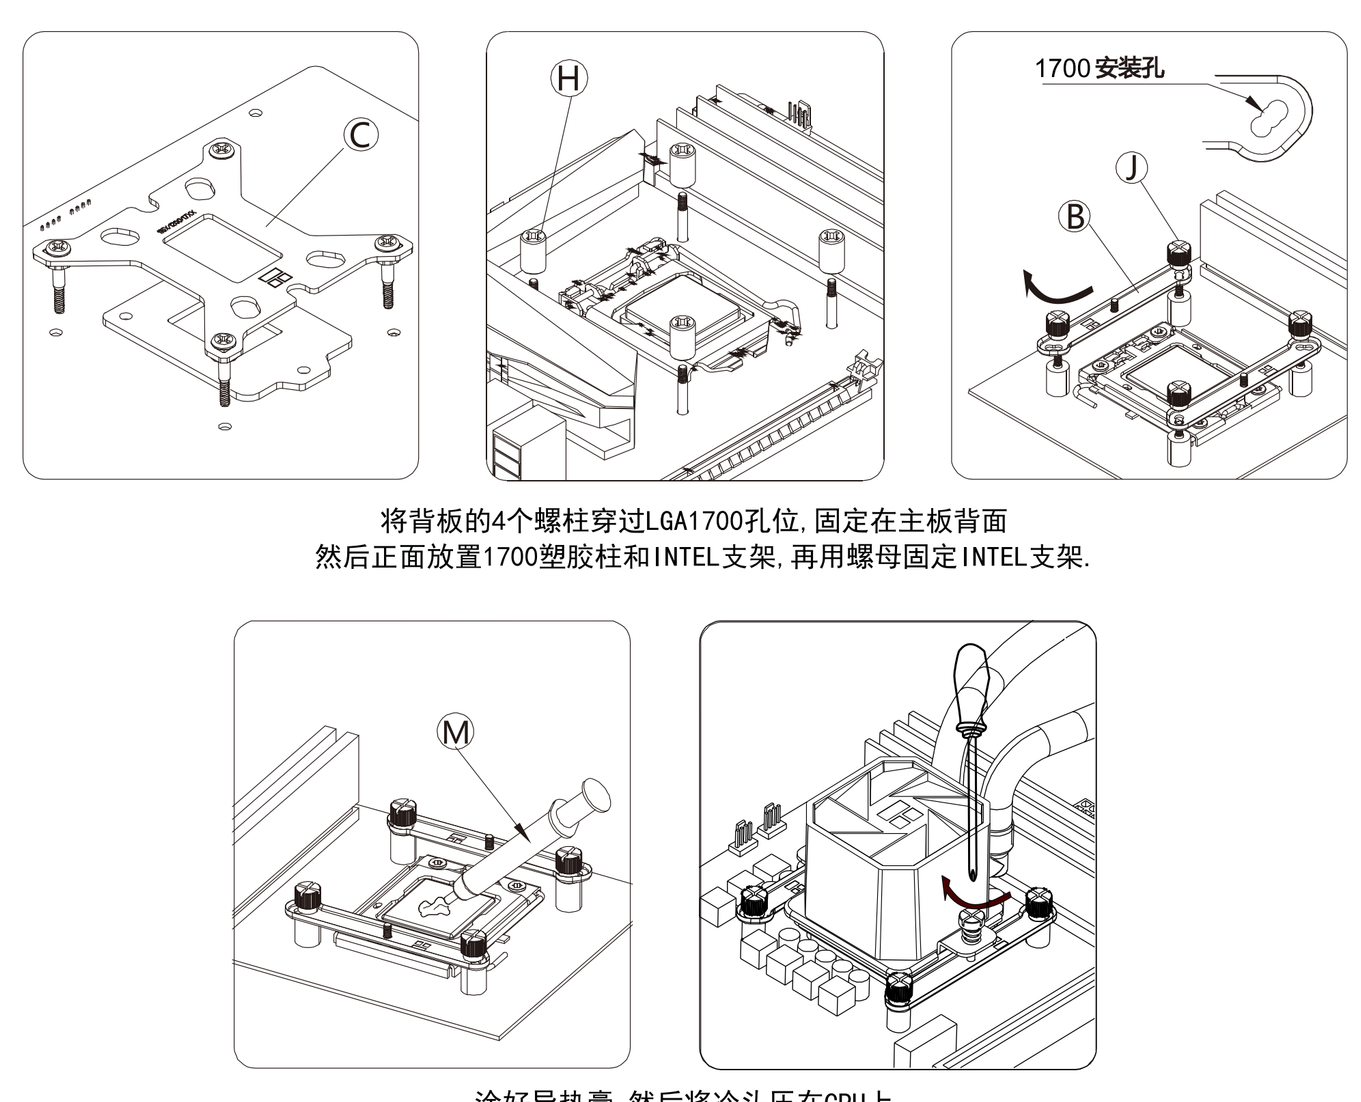

将背板的4个螺柱穿过LGA1700孔位，固定在主板背面
然后正面放置1700塑胶柱和INTEL支架，再用螺母固定INTEL支架.

涂好导热膏，然后将冷头压在CPU上，
将压杆扣具螺杆用螺丝刀锁紧. .

www.thermalright.com

06

INTEL LGA20XX 安装

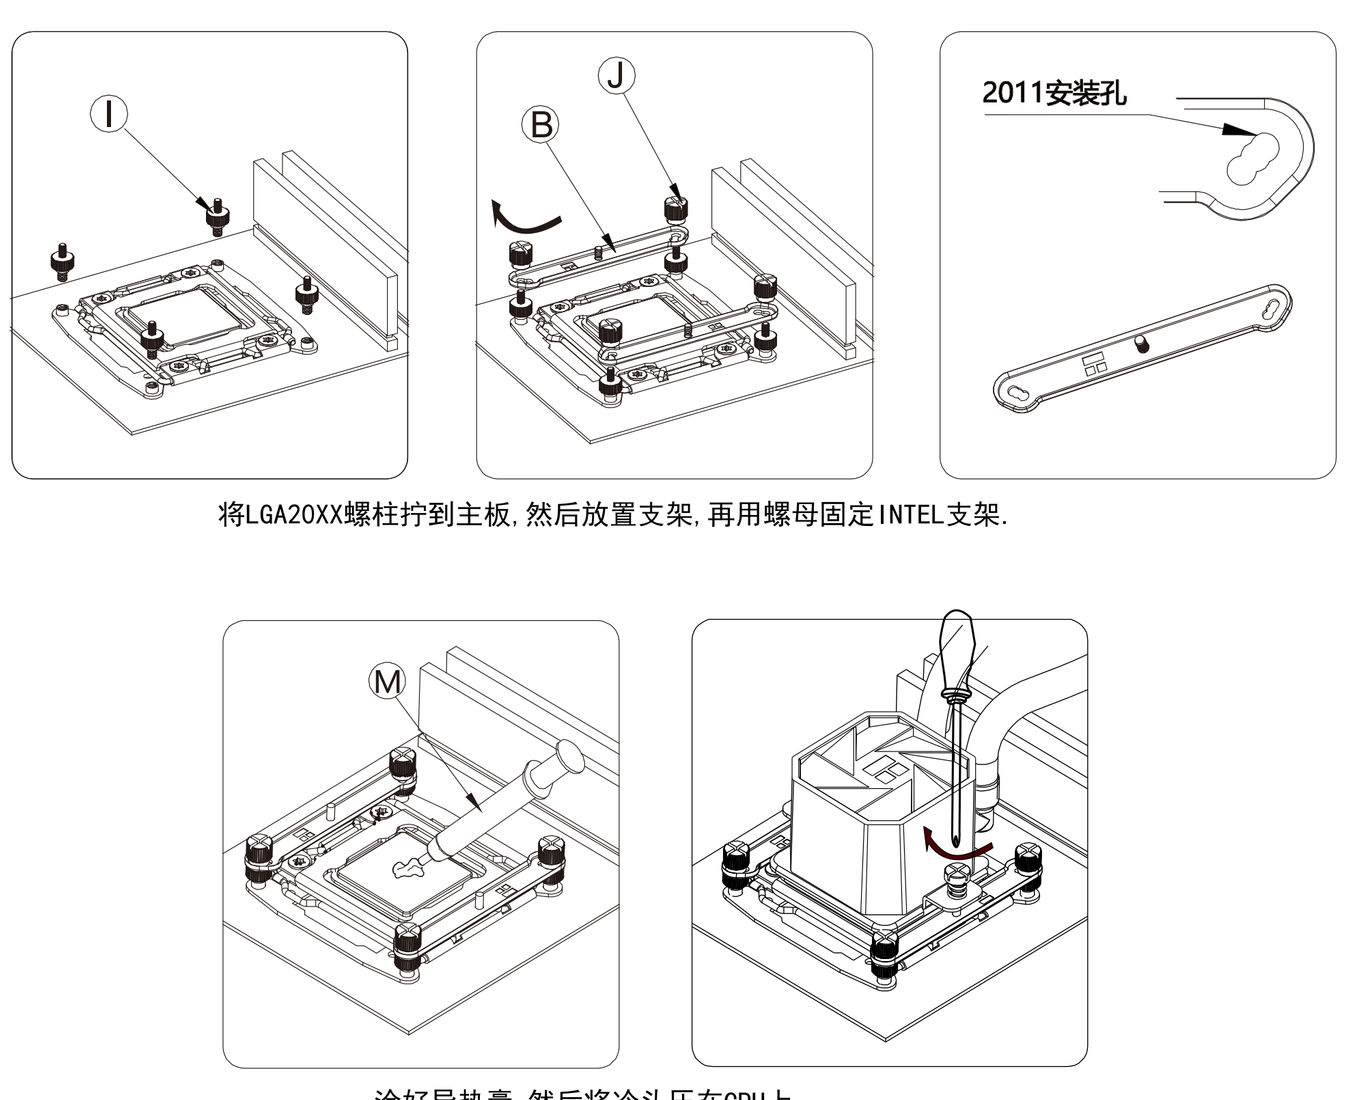

将LGA20XX螺柱拧到主板，然后放置支架，再用螺母固定INTEL支架.

涂好导热膏，然后将冷头压在CPU上，
将压杆扣具螺杆用螺丝刀锁紧. . .

www.thermalright.com

15

INTEL LGA20XX Installation

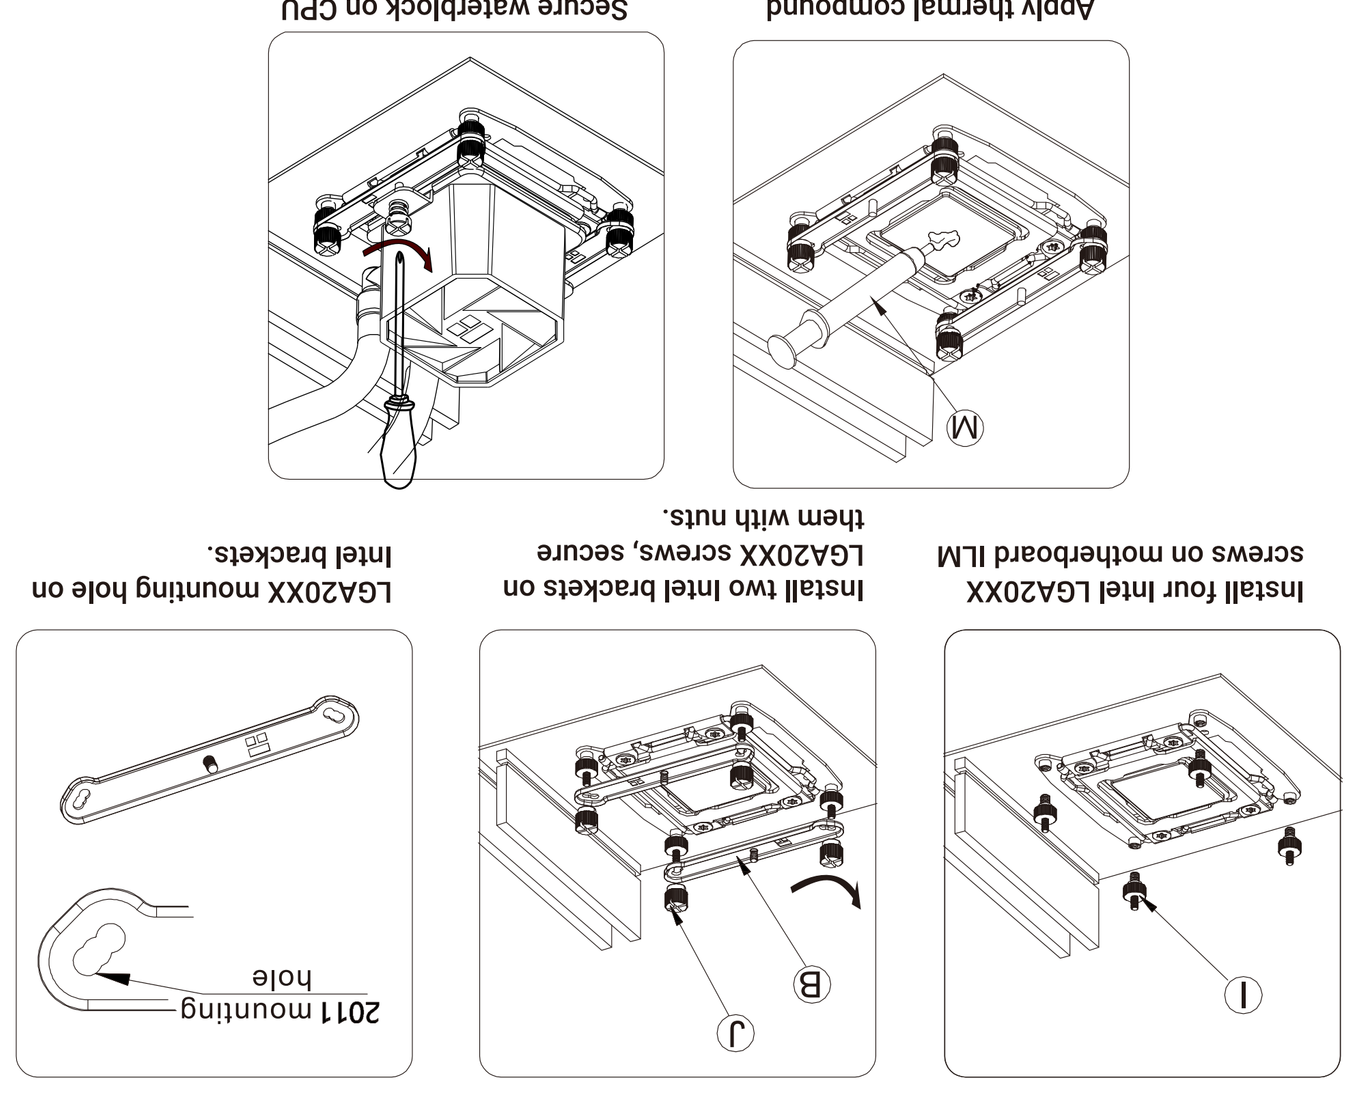

Install four Intel LGA20XX screws on motherboard ILM

Install two Intel brackets on LGA20XX screws, secure them with nuts.

LGA20XX mounting hole on Intel brackets.

Apply thermal compound on CPU IHS.

Secure waterblock on CPU with two nuts on waterblock bracket

www.thermalright.com

07

AMD AM4安装（AM5接口参考以下步骤）

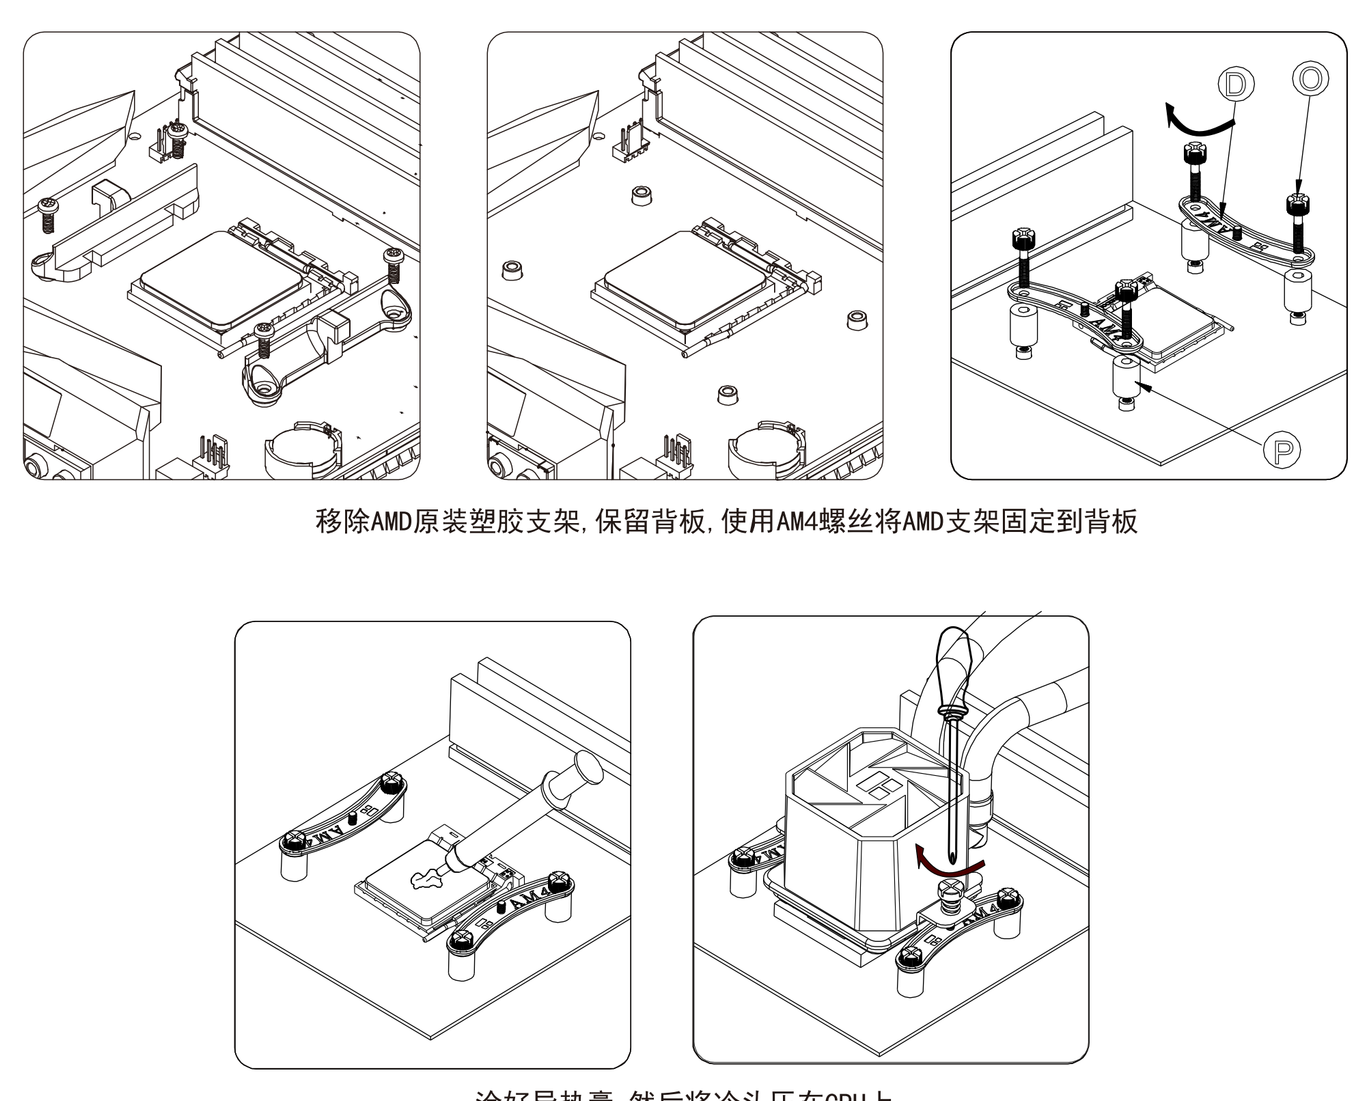

移除AMD原装塑胶支架，保留背板，使用AM4螺丝将AMD支架固定到背板

涂好导热膏，然后将冷头压在CPU上，
将压杆扣具螺杆用螺丝刀锁紧. . .

www.thermalright.com

14

AMD AM4 AM5 Installation

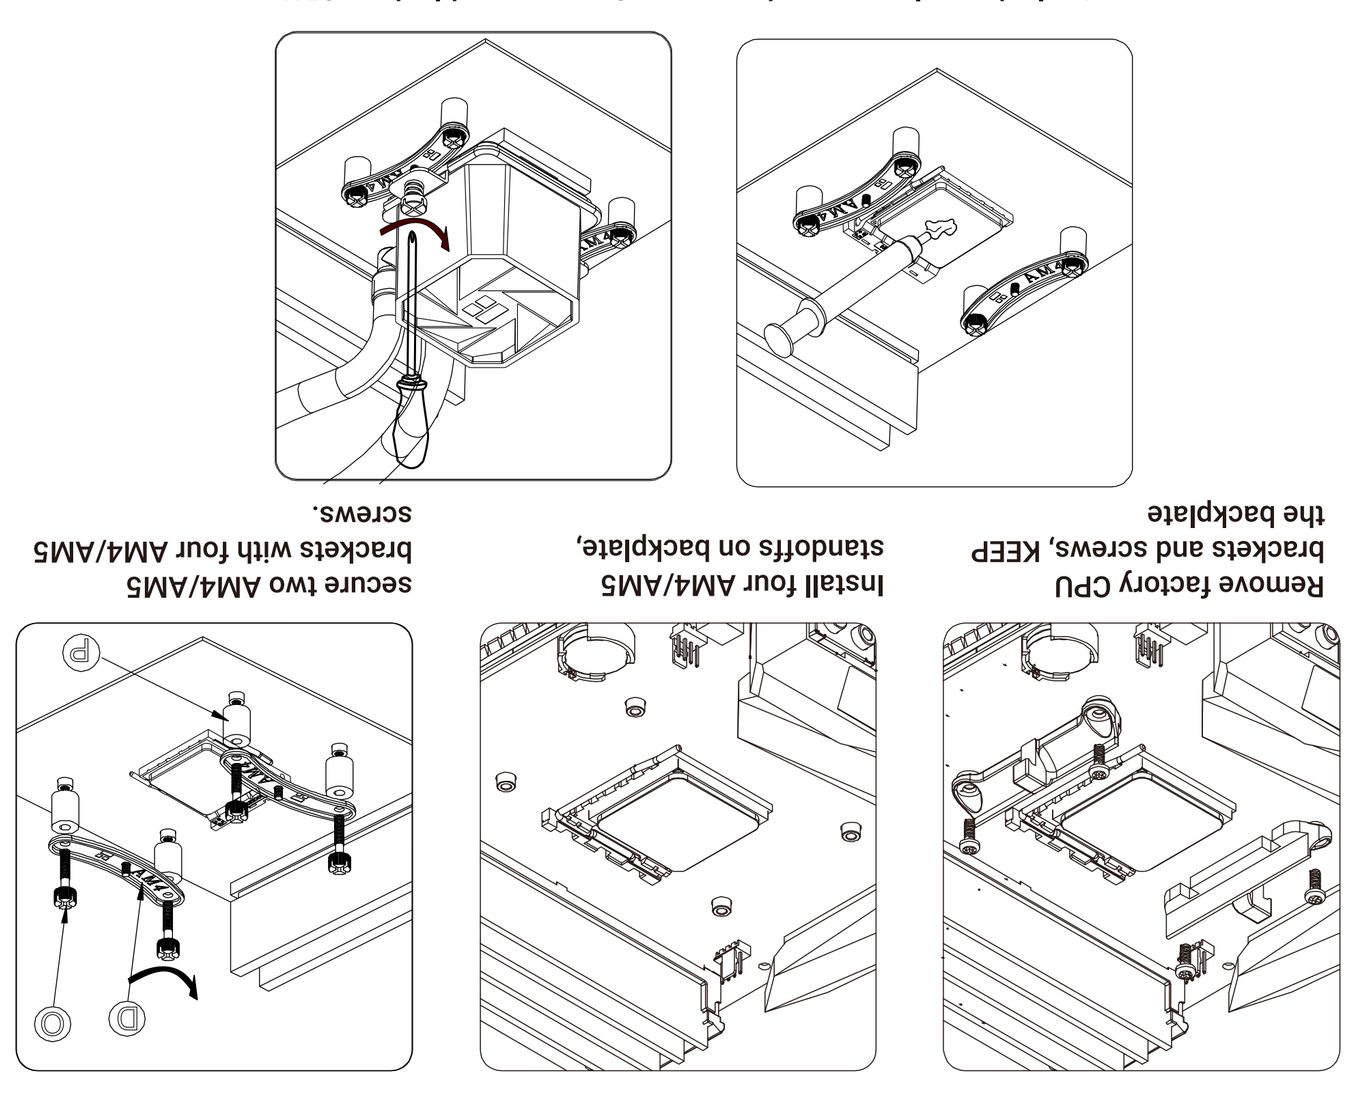

Remove factory CPU brackets and screws, KEEP the backplate

Install four AM4/AM5 standoffs on backplate,

secure two AM4/AM5 brackets with four AM4/AM5 screws.

Apply thermal compound on CPU IHS.

Secure waterblock on CPU with two nuts on waterblock bracket

www.thermalright.com

08

风扇与冷排安装

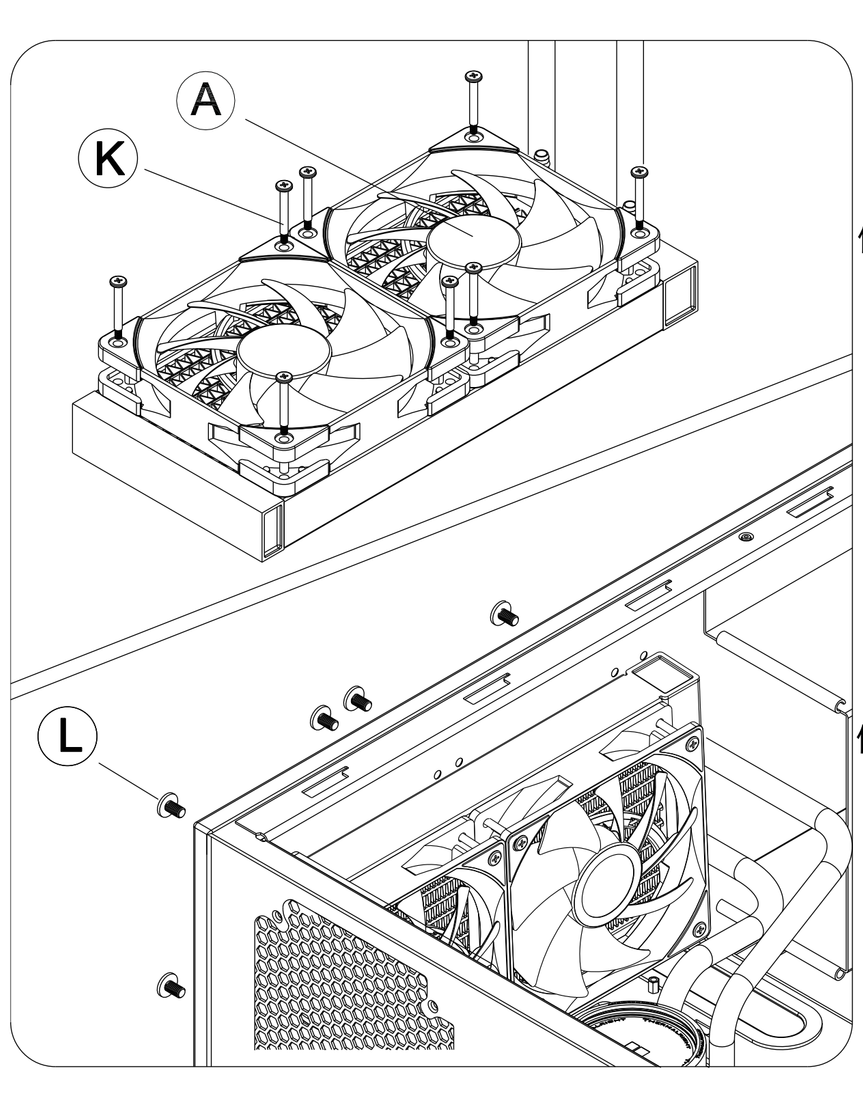

使用风扇螺丝，将风扇固定在水排上：

使用水排螺丝，将水排固定在机箱上。

www.thermalright.com

13

Fan&Radiator Mounting

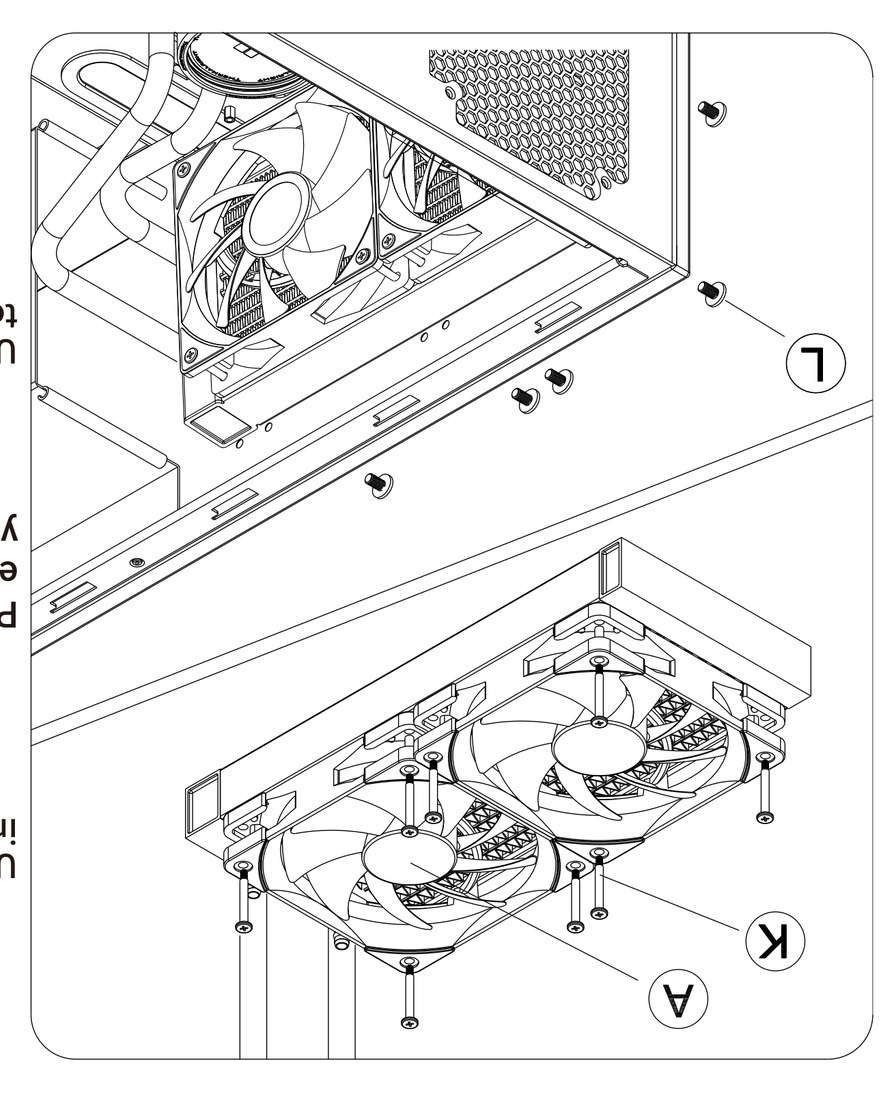

Use long fan mounting screws to install fans on the radiator.

Please adjust the fan exhaust side according to your case airflow config.

Use short radiator mounting screws to install radiator to the case.

www.thermalright.com

12

Waterblock/Fan Guide

■ Connect PUMP power cable to motherboard WATER PUMP or CPU OPT socket
Connect fan power cable to FAN HUB, then connect FAN HUB to CPU FAN socket on motherboard

Waterblock RGB lighting can be control by motherboard by connecting lighting cable to 3-pin ARGB socket on motherboard.

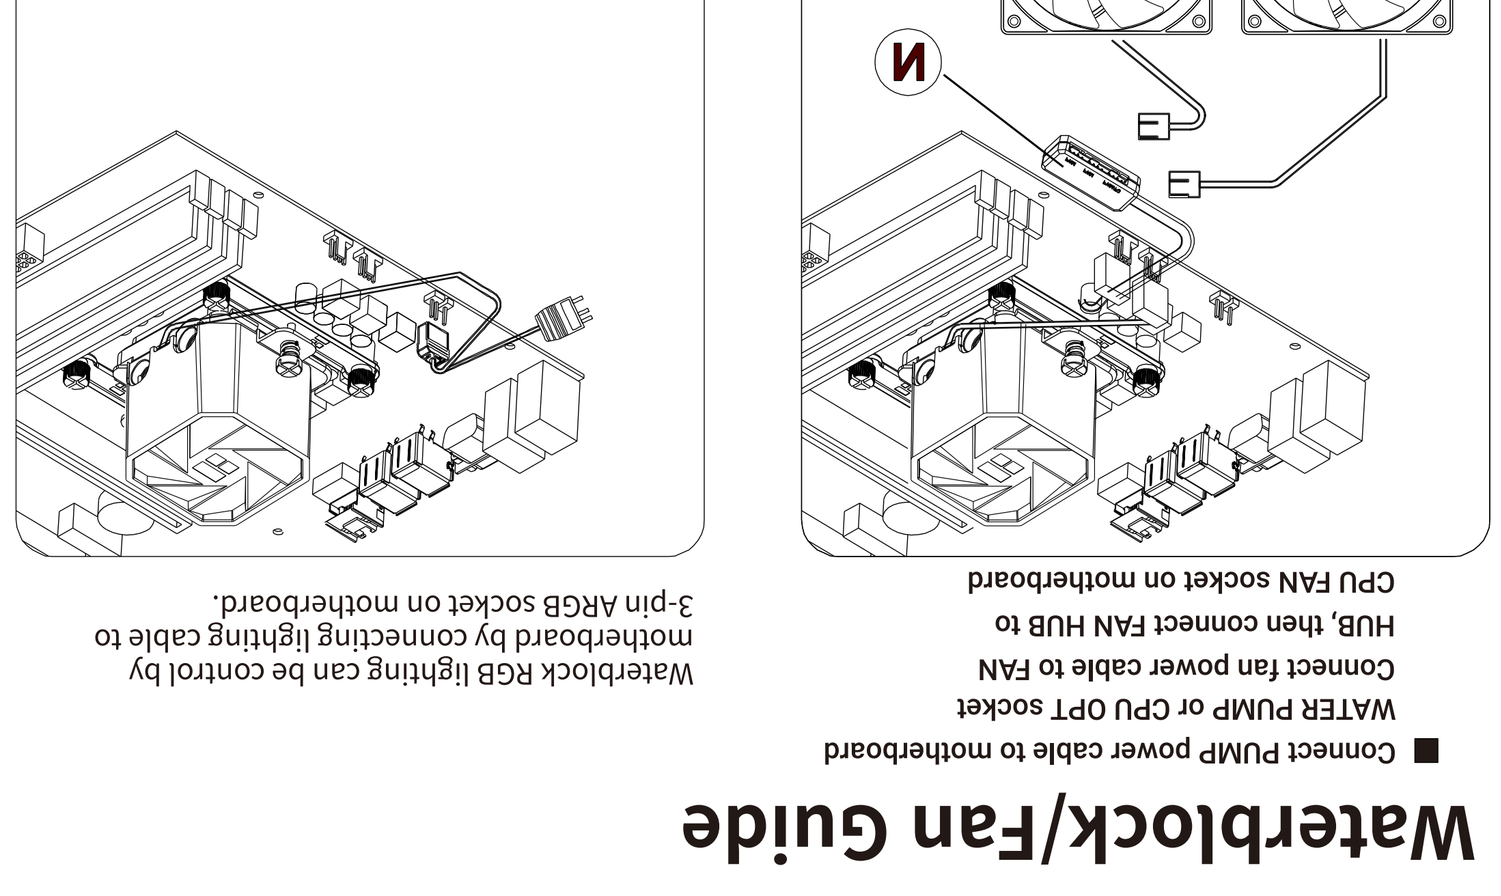

Waterblock LOGO plate can be rotated.

www.thermalright.com

09

冷头/风扇使用说明

■ 在主板上安装供电线和RGB线

将水泵供电线接在主板CPU OPT接口/PUMP
风扇供电线接在主板 CPU FAN接口。

冷头RGB线接在主板的3针ARGB接口即可通过主板的灯光软件来控制灯效。

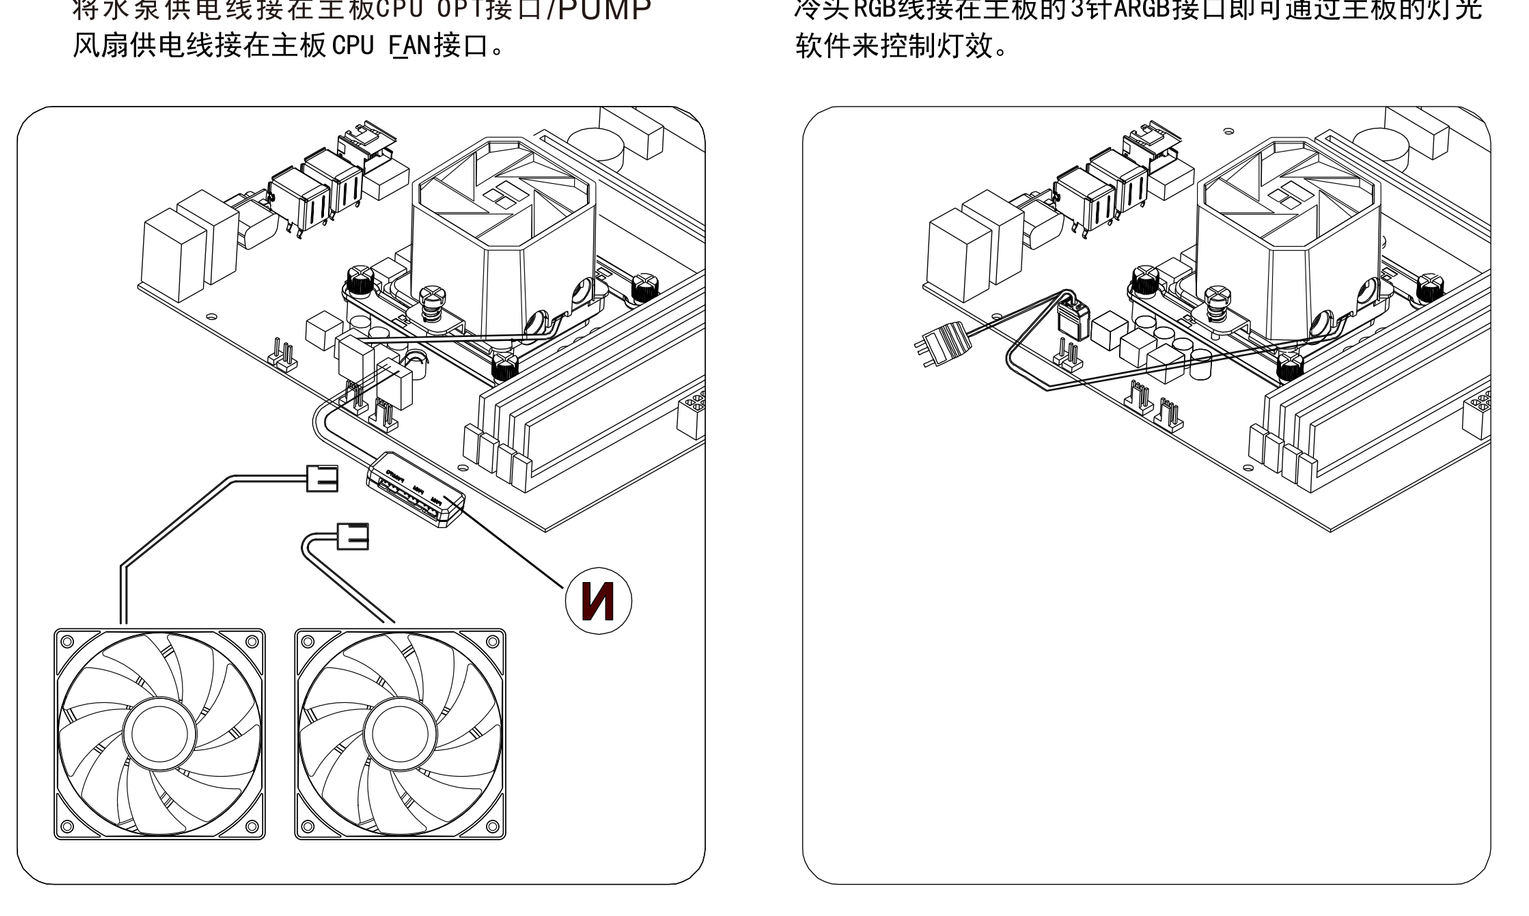

www.thermalright.com

10

THERMALRIGHT®
low Temperature high Performance
www.thermalright.com

11

THERMALRIGHT®
low Temperature high Performance
www.thermalright.com